

Cordless 2-in-1 Stick Vacuum Cleaner

G18SVR16



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

**THE 'V' STANDS
FOR VALUE.**

Contents

Safety Warnings	4
Unpacking.....	7
Product Overview.....	8
Preparation Before Use.....	9
Operation	12
Cleaning the Dust Tank and Filter.....	13
Cleaning the Agitator.....	16
Hints and Tips	17
Specifications.....	17

Safety Warnings

 
For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.

- Read all the instructions carefully before using the appliance and keep them for future reference.
- Retain the manual. If you pass the appliance onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of your appliance.
- Do not remove any fixed cover as this may expose dangerous voltages.
- Do not allow any electrical appliance to be exposed to dripping or splashing.
- To protect against electrical shock, do not immerse mains adapter, or any part of the appliance in water or other liquids.
- Never vacuum up water or any other liquids. Never vacuum up flammable substances and do not vacuum up ashes until they are cold.
- Never use the appliance without the motor protection filter. This damages the motor and shortens the life of the appliance.
- If a blockage is found in the brushes, hoses or tubes, it should be removed before use.
- Store and use the appliance well away from heat sources such as radiators or gas/electric fires.
- Do not run over any cord with the appliance.
- Close supervision is necessary when any appliance is used by or near children.


- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not point the hose, tube or any other accessory at the eyes, ears or mouth during operation.
- Unplug the appliance from the mains socket when it is not in use and before replacing filter.
- Allow the appliance to cool completely before cleaning or storing.
- Do not use the appliance for other uses than its intended use.
- The use of accessories not recommended by the appliance manufacturer may cause injuries.
- Do not use the appliance outdoors.
- Do not operate an appliance with a damaged DC power supply (or mains adapter), or in an abnormal state. If the mains adapter is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not continue to operate the appliance if you are in any doubt about it working normally (e.g. abnormal noise, smell, smoke), or if it is damaged in any way - switch off, withdraw the DC power supply (or mains adapter) and contact GVA customer care for advice.
- Any maintenance and repair must be handled by a professional technician. Do not try to repair by yourself.
- This appliance should only be used with the power adapter provided.

- Check and ensure the brush is rotating normally during operation.
- The cord of the mains adapter cannot be replaced; if the cord is damaged, the mains adapter should be scrapped.
- Make sure all the parts and accessories are properly installed before use.


Unpacking

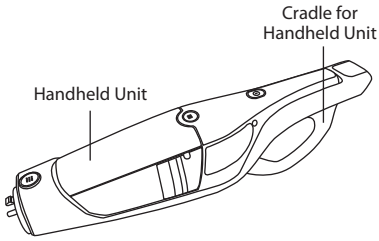


Main Body

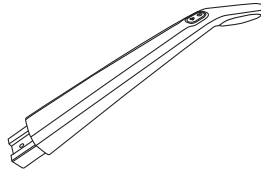 


Handle

 


Power Socket Stand

 


Nozzle

 


Nozzle Tube

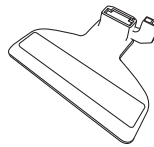 


Stand with Nozzle Holder

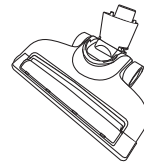 

Brush

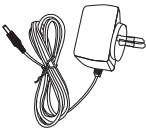 


Mains Adapter

 

Instruction Manual

* All images in this instruction manual are for indication only; please refer to your individual unit for details.

 Product Overview

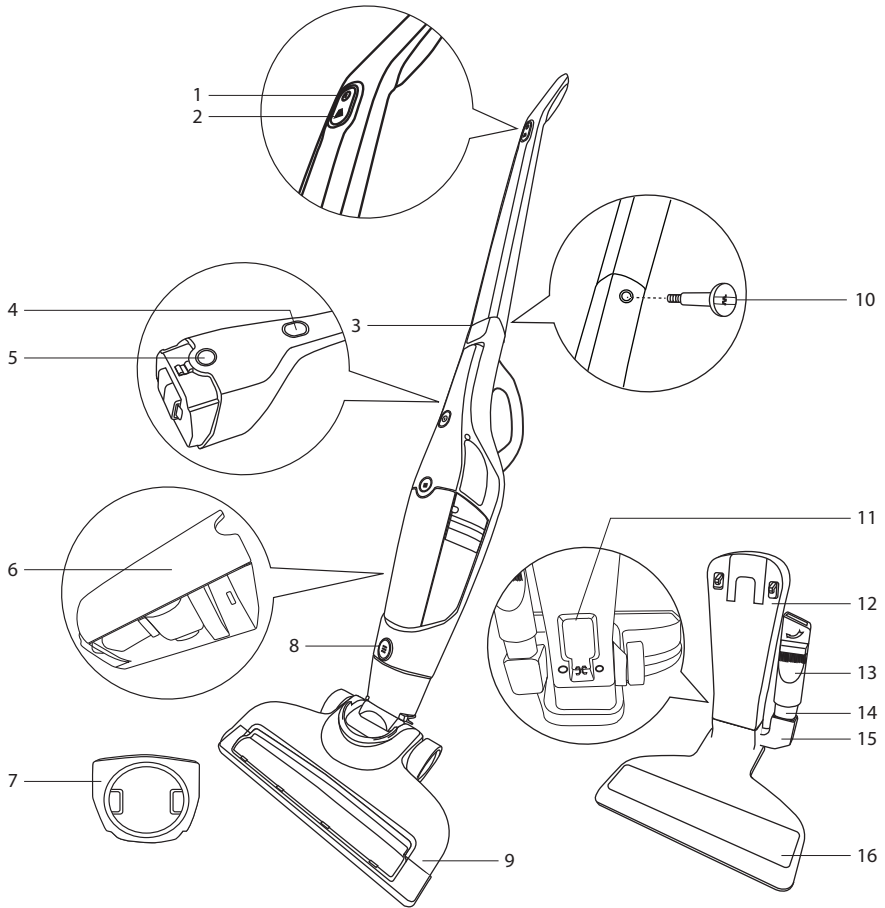

- 1. Handle Power Button
- 2. Speed Control Button
- 3. Main Unit Release Button
- 4. Main Unit Power Button (LED indicator)
- 5. Dust Tank Release Button

 
- 6. Dust Tank
- 7. Filter
- 8. Brush Release Button
- 9. Brush
- 10. Locking Screw
- 11. Power Socket

- 12. Power Socket Stand
- 13. Nozzle
- 14. Nozzle Tube
- 15. Nozzle Holder
- 16. Stand


Preparation Before Use

Connecting Handle to Main Body

1.

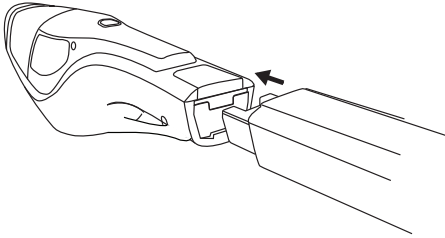


 2. Use a flat head screwdriver to secure the screw.

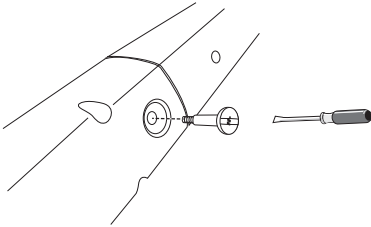


Installing the Unit Stand

 
1.

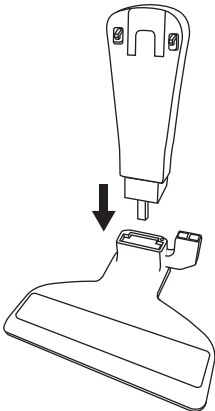

 
2.

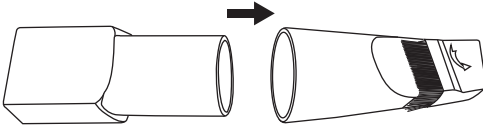

 3.

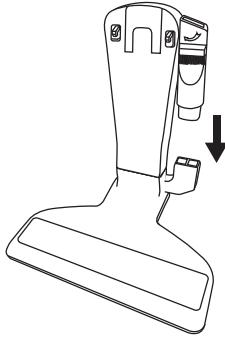


Connecting to the Brush

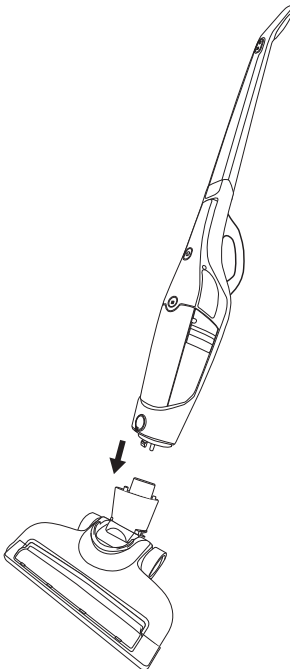 


Charging the Vacuum Cleaner

 1.

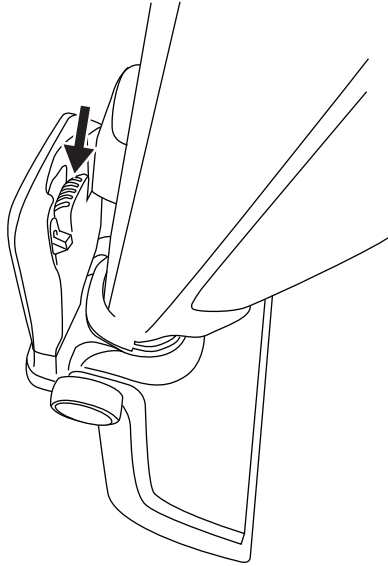

 2.

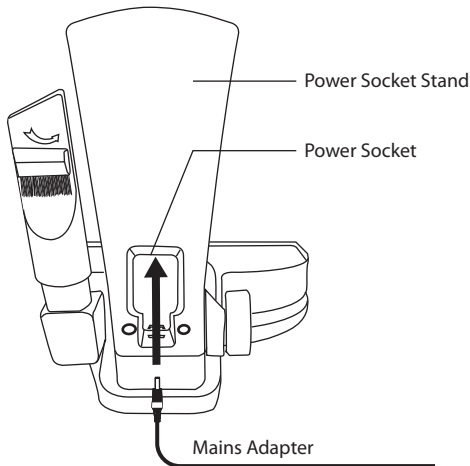

- When charging, the red light will illuminate.
- When charged, the green light will illuminate.



Always unplug from the mains socket when no vacuum cleaner is charging.

Operation



 
- Always unplug from the mains socket when the vacuum cleaner is in use.
- Do not vacuum large objects as they may cause blockage to the brush and tube/nozzle.

Cleaning as Upright Cleaner

1. Pull the cleaner off the stand. Hold down the stand while pulling the cleaner off the stand.
2. Press the **Handle Power Button** to turn the vacuum cleaner on or off.
3. Adjust the suction power by pressing the **Speed Control Button**. There are 2 speed levels.

Cleaning as Handheld Cleaner

1. Press the **Main Unit Release Button** to release the handheld unit from the cradle.
2. Insert the nozzle (together with the nozzle tube) into the opening of the handheld unit. You can adjust the nozzle head to use.

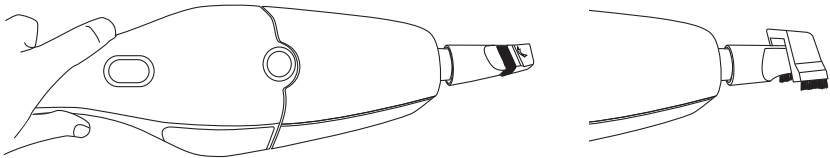

3. Press the **Main Unit Power Button** to turn the vacuum cleaner on or off. Only 1 speed level is available when using as handheld cleaner.
4. After using, put back the handheld unit into the cradle until a click is heard.



 
- Steady green LED means the cleaner is operating in full power.
- Flashing green LED means the cleaner is operating in half (or less than half) power.

Cleaning the Dust Tank and Filter




- Always ensure the unit is switched off and unplug from the mains before emptying or washing the dust tank.
- The dust tank must always be emptied when the dirt level reaches the “MAX” line on the dust tank to maintain optimum performance. You cannot empty the dust tank when the cleaner is fully assembled.
- Always make sure the dust tank is completely dry before installing back to the main unit. A damp dust tank will create electrical hazard.
- Filters should be cleaned regularly to maintain optimum performance.
- Always unplug from the mains socket before cleaning the filters.
- Always make sure the filters are completely dry before installing back. Damp filters will create electrical hazard.


1. Press the **Main Unit Release Button** to remove the handheld from the cradle.

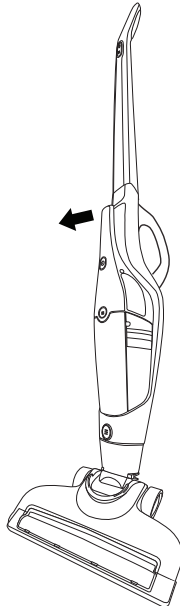

 
2. Press the **Dust Tank Release Button** to remove the dust tank from the handheld unit.

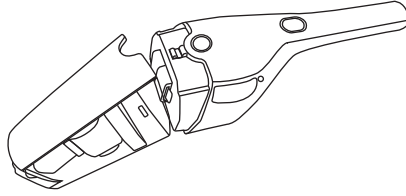


 
3. Take out the nozzle filter bracket and shroud assembly.

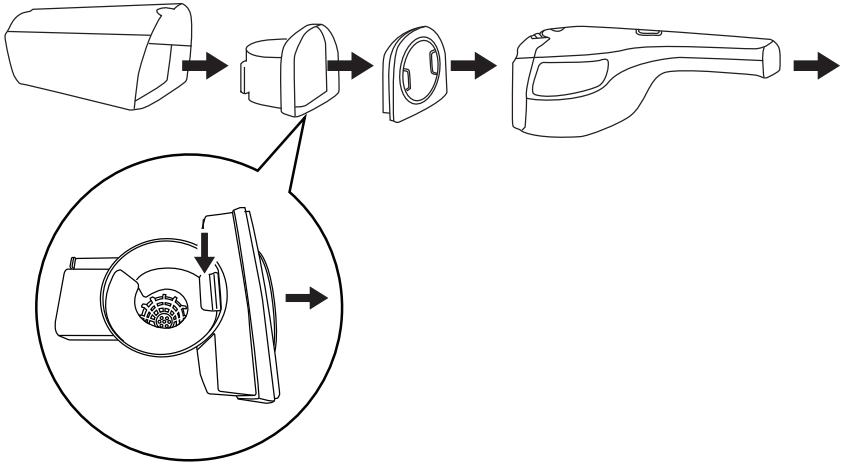

 
4. Remove the nozzle filter sponge.

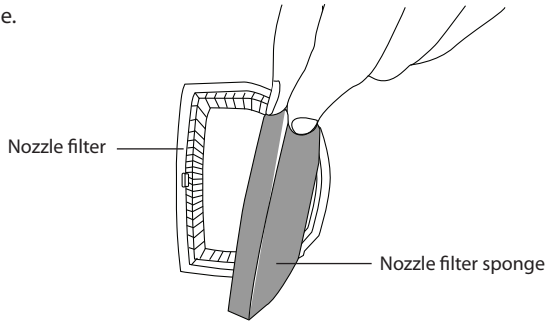

  5. Throw away the dirt from the dust tank.
6. Wash all of them under water. For the shroud assembly, make sure that no dirt is hidden inside the valve.

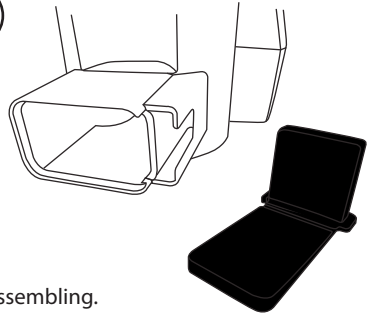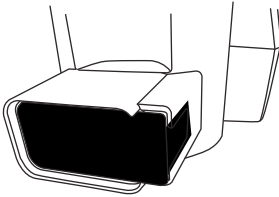

 
7. Make sure to dry all of them thoroughly before re-assembling.

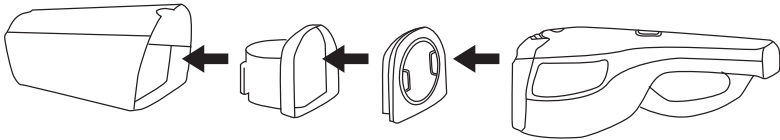

8. Re-attach the dust tank to the handheld unit until a click is heard.

Cleaning the motor filter

 1. Take out the motor filter from the motor body.
2. Wash it under water.
3. Replace only after drying thoroughly.

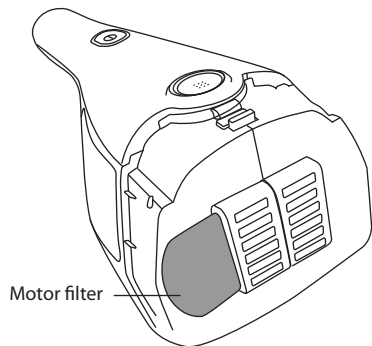


Cleaning the Agitator



- The agitator should be cleaned if worn out to maintain optimum performance.
- Always unplug from the mains socket before cleaning the agitator.
- The agitator shaft collar should be kept clean to maintain proper agitator rotation.

 1. Press the **Brush Release Button** to remove the brush from the main body.
2. Use a coin or flat head screwdriver to turn the lock to the unlock position.
3. Remove the agitator cover.
4. Take out the agitator. Pull off the agitator shaft collar. You may need to exert more strength to remove the agitator shaft collar. You can use a flat head screwdriver to pry it off. Remove any dust or hairs that are tangled. Push back the agitator shaft collar. Put back the agitator.
5. Put back the agitator cover and turn the lock to the lock position.

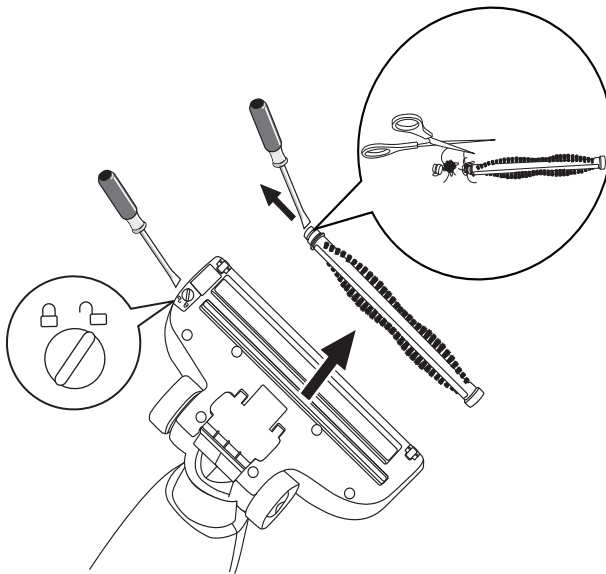

Hints and Tips

Problem	Possible Causes	Remedy
Green and red LEDs flash together around 3 times then switch off.	Battery failure.	Recharge the unit. If still fails, contact GVA customer care for advice.
Green and red LEDs flash alternately around 3 times then switch off.	Fault in the unit. <ul style="list-style-type: none"> Over-current during charging. The brush does not move normally and smoothly during operation. Overloading of the motor. Short circuit 	<ul style="list-style-type: none"> Check if using the correct mains adapter model. Clean the agitator shaft collar. Empty and wash the dust tank. Contact GVA customer care for advice.
Brush stops rotating during operation.	<ul style="list-style-type: none"> Agitator shaft collar is dirty. Dirt level in the dust tank exceeds maximum capacity. Filters and shroud assembly are dirty. 	<ul style="list-style-type: none"> Clean the agitator shaft collar. Empty and wash the dust tank. Clean the filters and shroud assembly.
Brush does not rotate while in parking position.	This is not a fault.	

Specifications

Model	G18SVR16
Voltage (mains adapter)	100-240V ~ 50/60Hz
Maximum Dust Tank Capacity	0.15L
Power Adapter Model	YLS0241A-A222050
Battery Model	18650-5S1P
Battery Rating	18V, 2150mAh, 18650 Li-on
Brush Head Rated Voltage	18V DC

We continually strive to improve our products, specifications may change without prior notice.



E2284



**THE 'V' STANDS
FOR VALUE.**

M.E.W. (Australia) Pty Ltd
15 Vaughan Street
Essendon Fields VIC 3041
ACN 152 719 036

1300 725 885
customercare@gvaproducts.com.au
gvaproducts.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.