

GVA

G23DFW17

INSTRUCTION MANUAL




23CM DESK FAN

Contents

Guide to the Appliance	2
Caring for the Environment	2
Safety Information and Warnings	3-4
Items in the Box	5
Assembly and Operation	5
Operation of Your Desk Fan	6
Technical Specifications	6
Care and Cleaning	6

Guide to the Appliance

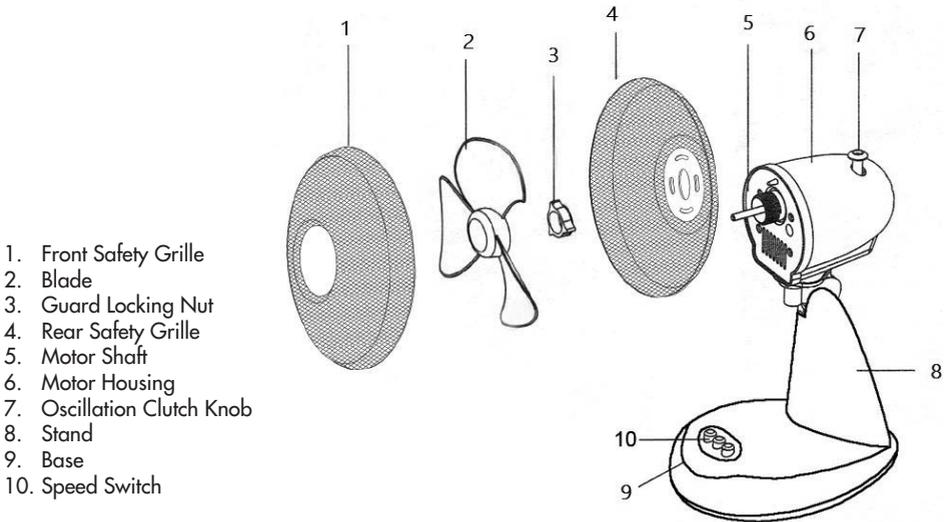

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

Safety Warnings

Read this Instruction Manual carefully before assembling or operating the appliance and keep it for future reference. If you pass the product on to a third party, include these instructions.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.
2. Dangerous high voltages are present inside this enclosure. To avoid electric shock, DO NOT open the cabinet. Refer servicing to qualified personnel only.
3. This appliance is intended for household use only and not for commercial, industrial or outdoor use. Other use not recommended may cause fire, electric shock or injury.
4. Make sure the fan is not placed near drapes, curtains, or any objects that may be drawn into the fan.
5. To protect against fire, electrical shock and injury to persons, do not immerse, plug or cord the unit in water or spray it with liquids.
6. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
7. No naked flames sources, such as candles, should be placed on the product.
8. Ventilation should not be impeded by covering the ventilation openings. Slots and opening are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.
9. Place the fan on a stable level surface when operating to avoid overturning.
10. Only connect to a suitably AC 220-240V~50Hz mains socket.
11. Do not operate the fan in the presence of explosive and/ or flammable fumes. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
12. Do not operate the fan with a damaged cord or plug, after a malfunction or if it is dropped or damaged in any manner.
13. Do not place the fan close to an open window. Rain splashing on the fan could cause an electric shock hazard.
14. Do not use fan near curtains, plants, window treatment, or where other objects can become caught in the blades. Do not let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with the appliance.

17. Do not leave the appliance running or operable in a place where young children or animals could have access to it without supervision.
18. Turn the fan OFF and unplug it from the outlet when it is not in use, when moving fan from one location to another and before cleaning.
19. To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord.
20. Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
21. If the fan is knocked over during use, turn off the unit and unplug it from the mains socket immediately.
22. Do not operate your fan in the bathroom.
23. Never allow children to point their fingers into any power sockets or moving parts.
24. Do not operate this appliance with anything other than your hands. Do not use the appliance with wet hands.
25. The use of attachments which are not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.

Warnings

Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.

Do not use the fan if the grille becomes damaged or loose.

Do not use the fan without fully assembled. The fan must operate standing upright.

Do not operate without the fan grilles properly in place. Do not use if grille becomes deformed, damaged or loosen to avoid injury to persons.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not use hazardous chemicals to clean or come into contact with the fan. Never attempt to use the fan without the base parts assembled or in a horizontal position.

The appliance is only intended for the purpose described in the user manual. Do not use the appliance or any part of the appliance out of the intended use to avoid risk.

Fan slots and oscillating feature are a potential finger entrapment hazard for toddlers and small children. Parental supervision is required.


When the fan is assembled, the fan guard should not be taken off anymore.

Items in the Box

Contents included in the box



Main Unit

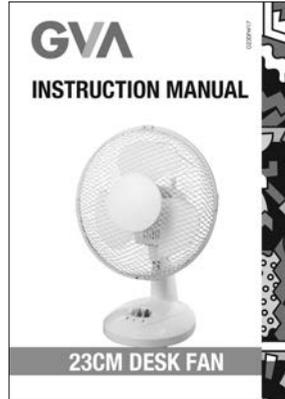

Instruction Manual

Assembly and Operation

Your Desk Fan has been boxed unassembled to minimise packaging waste.

Each part is designed to fit together and be disassembled easily for cleaning or storage.

To assemble the safety grille and blade assembly, remove the locking nut(item 3) (by turning it anticlockwise) from the motor housing(item 6).

Place the back safety grille(item 4) into position. Ensure the safety grille fits onto the locating lugs.

Fix the safety grille into position by refitting locking nut(item 3) and turning it until hand tight. Do not force the locking nut.

Push the fan blade(item 2) along motor shaft (item 5),

Lift out all locking clips on the front safety grille(item 1).

Position the front grill against rear grill so that the hole in the rim that accept small safety grill and nut are in line, insert the screw through the hole and screw on the nut, do not fully tighten at this stage.

Push the grille retaining clips into position ensure they are engage correctly on the rim of the grille. then tighten the screw and nut.

Operation of Your Desk Fan

Remove the cable tie and unravel the cordset before operation.

To adjust the angle of the motor head, securely holding the shaft of the pedestal tube, simply lift or lower the motor head housing, the head will click as it is being adjusted.

Press button 1 for a low speed, 2 for a high speed. Press 0 to switch the Desk Fan off.

To blow air in one direction and stop oscillation, allow the Desk Fan to move into the desired position and pull the clutch knob up. To return to a normal oscillating function, press the clutch knob down.

Technical Specification

Voltage: 220-240V, 50Hz,

Power consumption: 17W

Insulation class: Class II

Climate class: T

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

Care and Cleaning

Always disconnect electrical appliances before cleaning them.

To clean the blade and grille assembly, first remove the safety grille, remove the blade from the Desk Fan. Wipe them clean with a slightly damp sponge.

Clean the motor housing and body assembly with a clean, damp cloth and wipe dry.

Never spray the Desk Fan with liquids or submerge it in water or any other liquid.

M.E.W. (Australia) Pty Ltd.

15 Vaughan Street Essendon Fields, Vic 3041
ACN 152 719 036

After sales support: Aus - 1300 725 885

customercare@gvaproducs.com.au

gvaproducts.com.au

While every effort has been made in the preparation of this Instruction Manual, the publishers can not be held responsible for the accuracy of the information contained herein or any consequences arising from it.



E2284