


Radiant Wall Heater

/ GVARH120

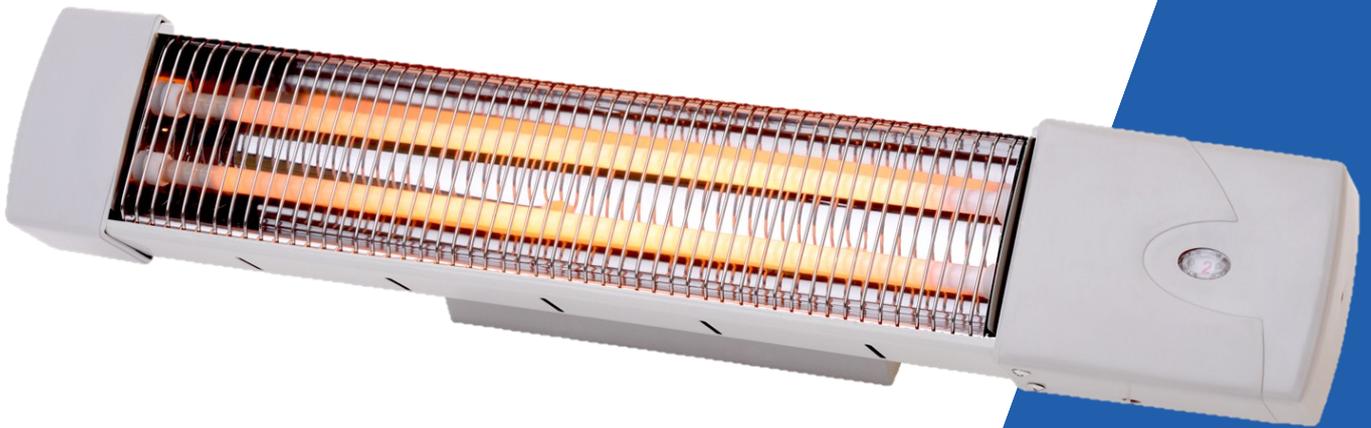

Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

General Care and Safety Guide

Thank you for choosing a GVA Radiant Heater. This GVA Heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front and sides of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance. Do not sit on the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Switch off when moving the heater.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. Do not use an extension cord, powerboard, or external timer with this unit.
14. Do not remove plug from power socket until the appliance has been switched off.
15. Do not remove plug from power socket by pulling cord; always grip plug.
16. Always unplug appliance when not in use.
17. Do not locate the heater directly below any power socket during operation.
18. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety..
20. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
21. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the GVA Customer Services Team.
22. If your appliance does not work, or is not working properly, contact the place of purchase or the GVA Customer Services Team. Repair work on the appliance by unqualified persons can cause serious risk to the user.
23. There are no user serviceable parts installed in the unit.
24. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
25. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
26. Indoor use only.
27. Children should be supervised to ensure that they do not play with the appliance.
28. It is important that you do not cover this heater.

TECHNICAL SPECIFICATION

Model No: GVARH120
Supply: 220-240VAC 50Hz
Wattage: 1200W

Operating your Radiant Heater

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use.

WARNING Keep all objects at least 1 metre from the front and sides of the appliance.

INSTALLATION INSTRUCTIONS

The heater must be installed in a position where:

- The outlet grill is a minimum of 1.8metres from the floor.
- There is a minimum of 30cm from either side of the heater to the nearest adjacent wall.
- There is a minimum of 21cm from the top face of the heater to the ceiling.

The heater is to be installed so that the pull cord and other controls cannot be touched by a person in the bath or shower.

The heater must be mounted in such a position that doors or other moving objects will not obstruct the airflow.

If the heater is mounted above a shelf or other wall mounted object, then there must be a minimum of 70cm clearance between the shelf and the outlet grill. Securely fix the wall mounting base to the wall surface with the screws and wall plugs supplied. Use a spirit level to ensure the wall mounting base is level. Fit the heater to the wall mounting base by ensuring the hooks on the wall mounting base have engaged with the mounting apertures of the heater. Slide the heater down to lock it into place. The heater must be locked in place on the Wall Mounting Base for safe operation.

HEAT CONTROL SWITCH

The control switch positions are:

"0" = OFF

"1" = Low Heat

"2" = High Heat

Check that the Heat Control Switch is set to Off position before plugging the heater into the mains supply. Always pull cord in a vertical direction to switch on, never pull cord on an angle to switch on. For greater economy, use the High Heat setting initially and then switch to the Low Heat setting.

Press or lift the main body lightly to adjust the angle the heat is directed.

WARNING The heater must not be used if the glass tubes are damaged

IMPORTANT! NEVER COVER THIS HEATER!

CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation:

Unplug the heater from the mains supply before cleaning.

Ensure that the heater has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.

The reflector body can be cleaned by using a dry duster or soft brush through the grill, taking care not to damage the glass tubes.

Never use solutions such as benzene, thinners or polishing agents.

In order to get the maximum heat, the reflector must be kept clean.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Ensure the heater is dry before plugging back into the mains supply.

Do not attempt to dismantle the heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

CAUTION

The Radiant Heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically.

