

Portable Mantle Radio AM/FM

/ GVA210



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

**THE 'V' STANDS
FOR VALUE.**

Frequency Range

F M: 88-108MHz

M W: 530-1600KHz

Maximum Power Output: $\geq 600\text{mW}$

Loud Speaker: $\phi 77\text{mm} \times 4 \Omega \times 3\text{W}$

Battery: 3X1.5V (UM-1X3)


DC 4.5V AC: 240V/50Hz

Earphone Jack: $\phi 3.5\text{mm}$

Battery Operation

Insert three pen-core shape batteries into compartment with three arrows indicated on the back of the unit.

Note: When the batteries are not going to be used for a long time, remove them from the radio to avoid leaking and damaging.

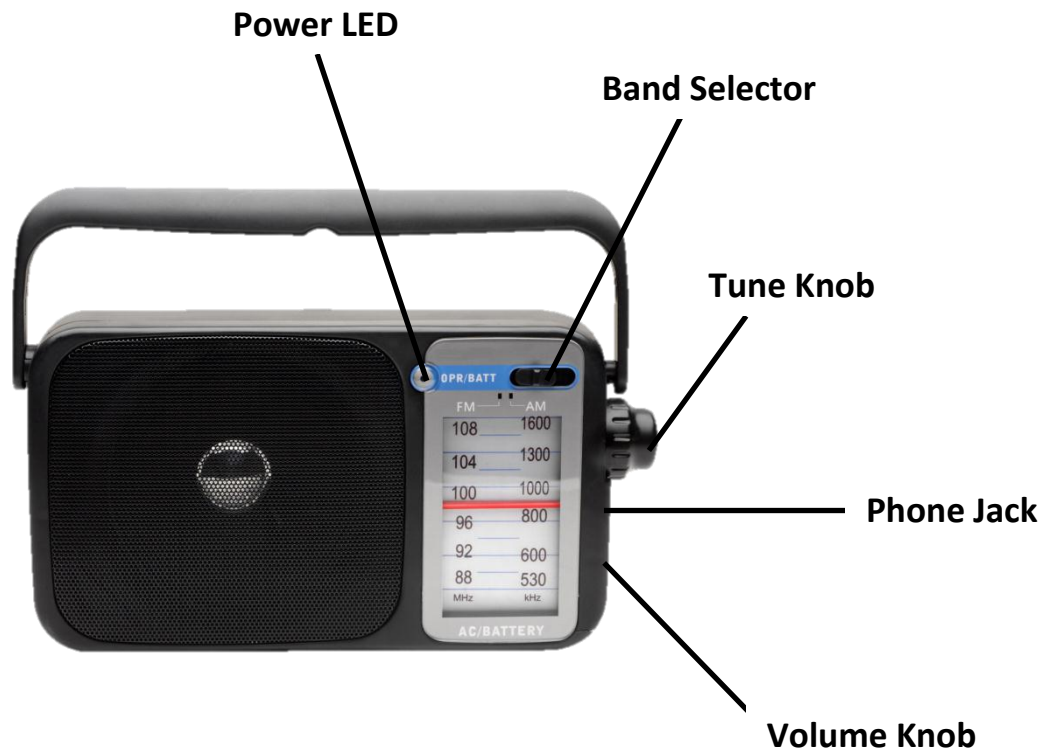

To power on: Rotate the **Power/Volume** knob counter clockwise.

Continue to rotate to increase the volume.

To power off: Rotate the **Power/Volume** knob clockwise.

To tune: Rotate the tune knob up and down to find the desired radio station.