

30cm Desk Fan

/ GVA30DF



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.


Important Safety Instructions

Store this instruction manual in a safe place, along with your warranty card, purchase receipt and packaging box for future reference. Please pay particular attention to the safety information.

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance outdoors.
- Power plug must be removed from power socket before cleaning, servicing, maintenance or moving the appliance.
- The fan should be placed on a flat surface when operating to avoid overturning.
- The fan should not be operated in a damp place of high humidity (such as the bathroom).
- Improper installation may result in the risk of fire, electric shock and or injury to persons.
- The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.
- Do not insert foreign objects into the safety grille as this may cause damage to the appliance and/or user.
- Please ensure that the power supply the fan is intended to be plugged into matches the power rating on the rating label of the appliance.
- During assembly, the fan guard must be secured with the screw provided, and that before cleaning the fan must first be disconnected from the power outlet.

Parts of your Pedestal Fan

1. Grille guard
2. Silent operation
3. 3 speed push buttons
4. Tilt adjustable pivoting head
5. Sturdy round base

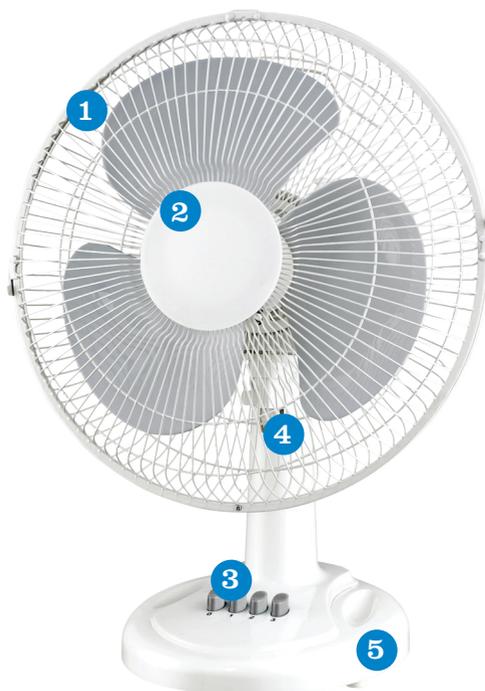

Operation of your Pedestal Fan

Your new 30cm Desk Fan has been shipped un-assembled to reduce wastage of packing material, paper cartons and weight. Please keep these instruction handy as they outline how to simply and easily assemble the fan.

1. After removing everything from the carton, locate the motor unit and spin the plastic nut in an anti-clockwise direction to undo. (Figure 1)


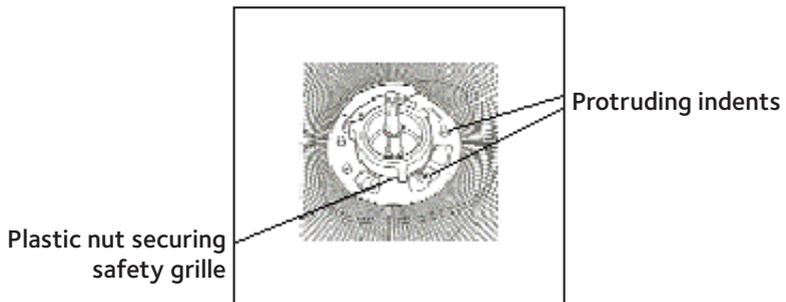


Figure 1


2. Locate the rear safety grille and position over the protruding indents. The safety grille will only fit one way over the protruding indents with the handle facing up. Replace the plastic nut and tighten, taking care to not over-tighten.

3. Locate the fan blades and locking nut. Position the blades over the metal spindle of the motor and line up the groove on the blades with the "T" protruding from the metal spindle. After the blade has been put on, tighten the locking nut in the reverse direction, taking care to not overtighten. As the bolt is secured in the opposite direction the spinning blades, the locking nut will tighten gradually with the operation of the appliance. (Figure 2.)

Figure 2

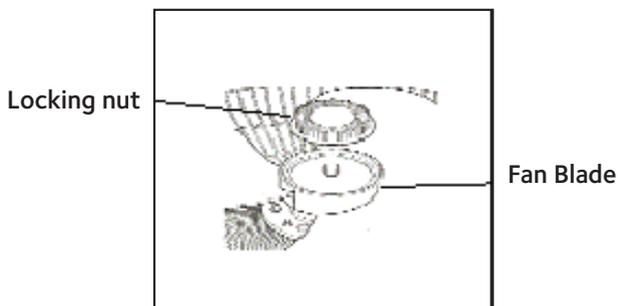

4. The safety grille has 4 clips that now need to be lifted to allow the fan to completely assemble. (Figure 3.)

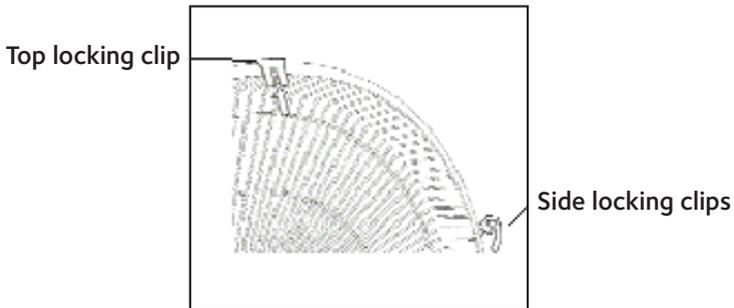

5. Align the top locking clip to the top of the rear safety grille that has already been secured to the fan motor. Lock the side locking clips in place and align the bottom hole for a security nut and bolt. Undo the security lock and bolt and thread the aligned holes in the security tools before doing up the bolt with a pair of pliers or similar tool.

6. Your 30cm Desk Fan that can now be used. Please ensure that the power supply outlet corresponds with the power rating on the compliance plate located either on the base of the fan or on the motor housing. There should be no bends in the power cord to ensure the correct operation of the appliance.

7. As well as allowing for an oscillating action of cooling, the basket can be tilted up and down to further direct the airflow. The oscillating action can be cancelled by pulling up the knob located on the back of the motor housing. This will stop the fan in the direction desired.

Care & Cleaning Instructions

Please always ensure appliances are disconnected from the power supply and are switched off before attempting any cleaning

The appliance is not designed to be dismantled without special tools. Please do not attempt to separate the unit. Cleaning of the unit should only be attempted with a slightly damp cloth. Care must be taken to ensure there that cloth is sufficiently dry to not leave any standing water. After wiping down the unit with the clean damp cloth, dry any wet spots with a dry paper towel or clean soft cloth.

