

115L Beverage Fridge

/ GVABFG115



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA


THE 'V' STANDS
FOR VALUE.

Table of Contents

Parts and Features-----	2
Important Safety Instructions-----	3
Installation Instructions-----	3
Before Using Your beverage center-----	3
Installation of Your beverage center-----	3
Reversing the Door Swing of Your beverage center-----	4
Operating Your beverage center-----	5
How To Use The Thermostat -----	5
Care and Maintenance-----	6
Change The Light Bulb-----	6
Cleaning Your beverage center-----	6
Maintenance Your beverage center -----	6
Vacation Time-----	7
Moving Your beverage center-----	7
Troubleshooting -----	7
Technical Specifications -----	8

PARTS AND FEATURES

REVERSIBLE DOOR

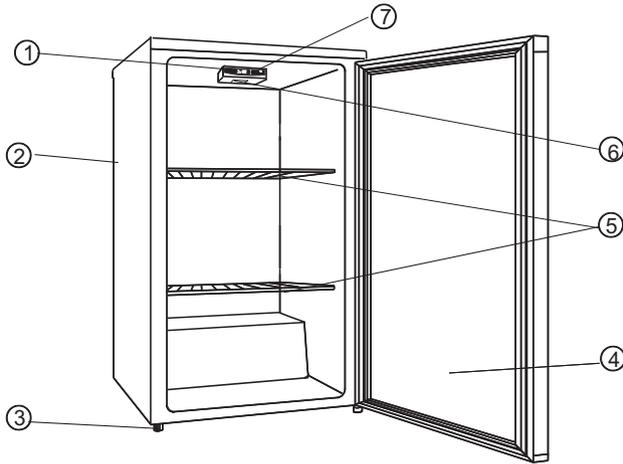

1. LAMP SWITCH
2. CABINET
3. LEVELLING LEGS
4. GLASS DOOR
5. SHELVES
6. INTERIOR LAMP
7. THERMOSTAT KNOB

Important Safety Instructions

- Read all instructions before using the appliance.
- Before you throw away your old beverage center: take off the door, leave the shelves in place, so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire or explosion.

INSTALLATION INSTRUCTIONS

Before Using Your beverage center

- Remove the exterior and interior packing, including protective foam on door panels .
- Check to be sure the following parts are included:
 - shelves
 - user manual
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.

Installation of Your beverage center

- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded. To level your appliance, adjust the legs at the front of the appliance.
- Allow 5 inches of space between the back and sides of the appliance ,which allows the proper air circulation to cool the compressor.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance not to perform properly.
- Avoid locating the appliance in moist areas. Too much moisture in the air will cause frost to form quickly on the evaporator.
- Plug the appliance into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and or grounding should be directed toward a certified electrician or an authorized products service center.

Warning: Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized products service center.

Reversing the Door Swing of Your beverage center

This beverage center has the capability of either opening the door from the left or right side. The unit is delivered to you with the door opening from the left side. Should you desire to reverse the opening direction, please follow these instructions.

NOTE:

Before Reversing the door ,the power must be shut off.

All parts removed must be saved to do the reinstallation of the door.

This beverage center has been built with the door hinges on the right. If you wish to change the opening direction, follow the instructions below:

1. Remove the upper hinge cover(6) first
2. Remove the two screws (1) that hold the upper hinge (5) (right side) to the frame. Take away the upper hinge (5).
3. Lift the door and place it on a padded surface to prevent scratching it.
4. Remove the two screws(8) that hold the lower hinge(2) and Make sure to Remove the lower hinge(2).
5. Remove the left front leg (4) and transfer it to the right side.
6. Remove the hole cover plate(7) to the right side.
7. Before placing this lower hinge(2), remove the bolt-pin (9) and reverse the direction of the lower hinge(2). Then install the lower hinge (2) onto the left side of the lower frame with two screws (8).
8. Insert the bolt-pin(9) to the lower hinge (2).
9. Set the door to its place making sure the door seat at the lower hinge(2)
10. While holding the door in the closed position secure the upper hinge (5) in the top frame of left side with two screws (1). Please remember that do not tighten the two screws(1) until the top of the door is levelled with the counter top.
11. Install the upper hinge cover(6) on the upper hinge..

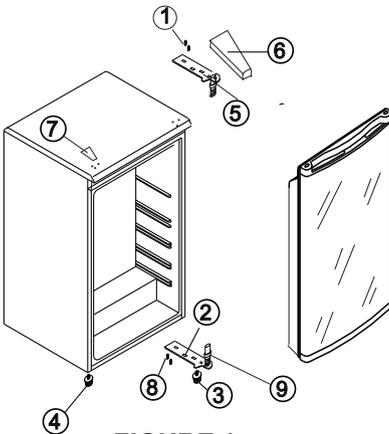


FIGURE 1

Door opening from left side

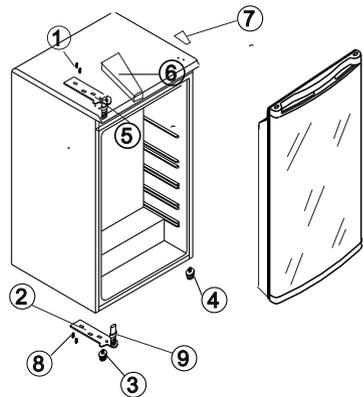


FIGURE 2

Door opening from right side

IMPORTANT SAFEGUARDS

Do not store food in beverage center, as interior temperature may not get cool enough to prevent spoilage. As a natural result of condensation, in summer months or area of high humidity, the glass door may built up moisture on the outside .Just wipe it away.

OPERATING YOUR beverage center

It is recommended you install the beverage center in a place where the ambient temperature is between 22 -25 degree Celsius .If the ambient temperature in above of below the recommended temperature ,conditions may cause interior temperature to fluctuate.

If the interior light is left on, the temperature inside the beverage center will be higher.


Recommended Temperatures for chilling beverage

Warmer beverage	7-9°C
Colder beverage	3-6°C

The above temperatures may fluctuate depending on whether or not the interior bulb is on or off of whether the bottles are located on the lower/middle or lower section.

HOW TO USE THE THERMOSTAT

Turn the thermostat knob, you can adjust the temperature of the compartment you desired. Turn it clockwise, the temperature of the compartment will become cooler and cooler. To store red beverage you can adjust it anti-clockwise, to store white beverage you can adjust it clockwise.

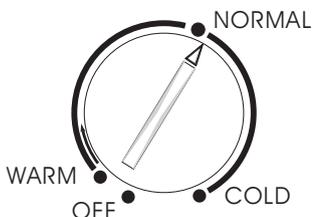

Shelves

To accommodate different size bottles, the shelves can be moved up or down by sliding them out the tracks first. Shelves are designed to accommodate maximum amount of bottles.

Also, there is a 4 to 6°C variance between the top and bottom shelves of the beverage center. Therefore, if you have set the beverage center for beer only and you want to place a sparkling wines, you should place the wine bottles on the top shelves and the beers on the bottom shelves.

CARE AND MAINTENANCE

CHANGING THE LIGHT BULB

NOTE:

All parts removed must be saved to do the replacement of the light bulb.

Before removing the light bulb, either unplug the refrigerator or disconnect the electricity leading into the refrigerator at the main power supply. Failure to do so could result in electrical shock or personal injury.

Light bulb should not exceed 5 watts.

Cleaning Your beverage center

- Unplug the beverage center, and remove the bottles.
- Wash the inside with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a liter of water.
- Wash the shelves and trays with a mild detergent solution.
- The outside of the beverage center should be cleaned with mild detergent and warm water.
- It may also be necessary to periodically wipe the bottom part of the storage area, as the beverage center is designed to retain humidity, and condensation may collect there.

Maintenance of Your beverage center

- Power Failure
Most power failures are corrected within a few hours and should not affect the temperature of your beverage center if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

Vacation Time

During long absences, remove all the bottles; unplug your beverage center, clean your beverage center, and leave the door open slightly to avoid possible formation of condensation, mold, or odors.

Moving Your beverage center

- Remove all the bottles.
- Securely tape down all loose items inside your beverage center.
- Turn the levelling screws up to the base to avoid damage.
- Tape the doors shut.
- Be sure the beverage center stays in the upright position during transportation.

Troubleshooting

You can solve many common beverage center problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
beverage center does not operate.	Not plugged in. The circuit breaker tripped or blown fuse.
beverage center is not cold enough.	Check to be sure the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly. The beverage center does not have the correct clearances.
Compressor turns on and off frequently	The room temperature is hotter than normal. A large amount of contents has been added to the beverage center. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The beverage center does not have the correct clearances.
The light does not work.	The home circuit breaker or fuse has tripped. The beverage center is unplugged. The bulb has burned out. The switch is in the "OFF" position.
Vibrations.	Check to assure that the beverage center is level.
The beverage center seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your beverage center. Contraction and expansion of the inside walls may cause popping and crackling noises. The beverage center is not level.
The door will not close properly.	The beverage center is not level. The doors were reversed and not properly installed. The gasket is dirty. The shelves are out of position.

Technical specifications:

For detailed specifications, please refer to the nameplate at the back of the beverage center. The specifications are subject to change without prior notice due to products improvement.