

# 2000W CERAMIC TOWER HEATER

GVACH340



Instruction Manual

12  
MONTH

MANUFACTURER'S  
WARRANTY

**GVA**

THE 'V' STANDS  
FOR VALUE.

# Contents

---

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Operation Instructions	5
Care and Maintenance	6
Technical Specifications	7

# Guide to the Appliance

---



1. Control panel
2. LCD display
3. Air inlet grill (at rear)
4. Oscillation base
5. Air outlet grill

NOTE: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

# Caring for the Environment

---

## Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

## Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous to the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

# Safety Information and Warnings

---

Thank you for choosing a GVA Heater. This GVA Heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance. Do not sit on the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Switch off when moving the heater.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. It is recommended that this heater is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
14. A correctly specified, undamaged extension cord may be used with this heater provided it is used in a safe manner.
15. Do not remove plug from power socket until the appliance has been switched off.
16. Do not remove plug from power socket by pulling cord; always grip plug
17. Always unplug appliance when not in use.
18. Do not locate the heater directly below any power socket during operation.
19. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all of the cord has been removed from any cord storage area and is unrolled before use.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety..
21. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
22. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact GVA after sales support.
23. If your appliance does not work, or is not working properly, contact the place of purchase or GVA after sales support. Repair work on the appliance by unqualified persons can cause serious risk to the user.
24. There are no user serviceable parts installed in the appliance.
25. Do not place the appliance in wardrobes or other enclosed spaces as this may cause fire hazards.
26. This appliance is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
27. Indoor use only.
28. Children should be supervised to ensure that they do not play with the appliance.
29. Ensure heater is on a flat, stable, heat-resistant surface.
30. It is important that you do not cover this heater.

# Operation Instructions

---

**NOTE:** Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the appliance before use. This appliance requires no installation, it should be used solely as a portable appliance.

**WARNING** keep all objects at least 1 metre from the front, sides and rear of the appliance.

## Control switches

**On/Off Button:** This button will start the heater. When turned on, the appliance will automatically switch to Fan only mode and blow room temperature air.

**Swing Button:** This button turns the heater Oscillation function On and Off.

**Heat Mode Button:** This button cycles through the different heat settings (Fan, Low, High and Thermostat Controlled Modes). To change the heat setting simply press this button, the appliance will beep and the selected mode will display on the LCD screen.

## Thermostat

Press the Heat Mode Button until the display shows "AUTO".

Press the "+" button to increase the temperature or

Press the "-" button to decrease the temperature

How the set temperature is maintained:

If the room temperature is higher than the set temperature, the heater will switch off.

If the room temperature is lower than the set temperature, the heater will switch on again.

## Timer setting

The Timer function allows the heater to operate continuously for 1 hour intervals, and can be programmed up to 8 hours before automatically turning Off. The timer can be set in any heat mode.

Press TIME button once to make the heater operate for 1 hour before it automatically turns Off.

Press TIME button again for 2 hours operation before automatic turn Off. Repeat this process for longer operating times.

Selected operating time will light up in screen and will change throughout the programmed time indicating the amount of hours remaining before the heater will switch Off.

## Oscillation

If you press the Swing Button, the appliance will oscillate through 90°. The display shows the oscillation symbol.

If you want to switch Off, press the Swing button again.

## Remote control

The remote control buttons perform the same functions as those on the control panel of the appliance. For best results, aim the remote directly at the remote sensor on the front panel of the heater. The remote control requires 2x AAA batteries (not included).

**WARNING** never cover this heater

# Care and Maintenance

---

## Safety device

This appliance has three protection devices:

The first device will automatically turn the appliance off if the appliance is not in the appropriate operating position.

The second device automatically disconnects & reconnects the appliance at a pre-set temperature.

The third device disconnects the appliance permanently in case of overheating, by means of a thermal fuse (it is non resettable).

## Care and cleaning

The heater requires regular cleaning to ensure trouble free operation:

Unplug the heater from the mains supply before cleaning.

Ensure that the heater has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Never use solutions such as benzene, thinners or polishing agents.

Ensure the heater is dry before plugging back into the mains supply.

**CAUTION** the heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically.

Do not attempt to dismantle the heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

## Proof of purchase

To receive warranty retain receipt as proof of purchase.

# Technical Specifications

---

Model No: GVACH340

Supply: 220-240VAC 50Hz

Wattage: 2000W

Subject to technical change without notice





**THE 'V' STANDS  
FOR VALUE.**

M.E.W. (Australia) Pty Ltd

15 Vaughan St

Essendon Fields VIC 3041

ACN 152 719 036

1300 725 885

[customercare@gvaproductions.com.au](mailto:customercare@gvaproductions.com.au)

[gvaproducts.com.au](http://gvaproducts.com.au)