

# Digital Clock Radio

GVACR972



## Instruction Manual

12  
MONTH

MANUFACTURER'S  
WARRANTY

**GVA**

THE 'V' STANDS  
FOR VALUE.

# Contents


---

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Operation Instructions	5
Troubleshooting	8
Technical Specifications	9

# Guide to the Appliance

---

1. SNOOZE / SLEEP
2. VOLUME DOWN / ALARM 1 ON / OFF SET
3. VOLUME UP / ALARM 2 ON / OFF SET
4. << / TUNE -
5. SPEAKER
6. AC POWER CORD
7. FM ANTENNA
8. >> / TUNE +
9. SET.MEM / MEMORY+
10. ON/OFF RADIO / AM/FM BAND BUTTON
11. DISPLAY
12. BATTERY COMPARTMENT (REAR OF UNIT)
13. RATING LABEL (REAR OF UNIT)

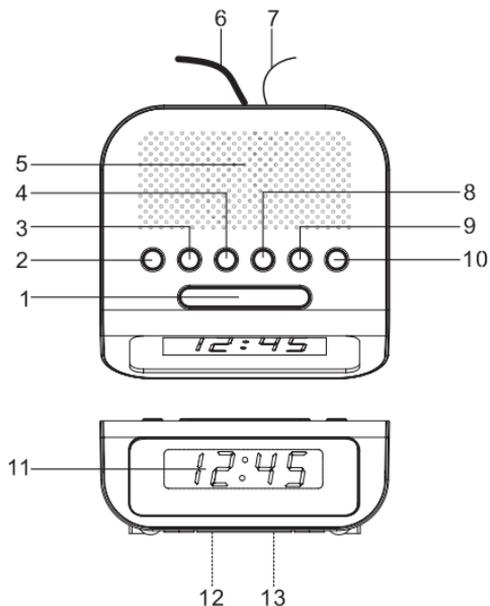

# Caring for the Environment

---

## Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

## Responsible disposal of the appliance

All electrical and electronic products including batteries should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

For more detailed information about disposal of your old appliance, please contact your local authorities, waste disposal service or the shop where you purchased the product.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

# Safety Information and Warnings

---

1. No naked flame sources, such as lit candles, should be placed on the appliance.
2. Do not place the appliance in closed bookcases or racks without proper ventilation.
3. Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
4. Ventilation openings should not be obstructed or covered by items such as newspapers, table-cloths, curtains, etc.
5. The appliance should not be exposed to dripping or splashing and objects filled with liquids, such as vases, should not be placed on the appliance.
6. Do not connect FM antenna to an outside antenna.
7. The appliance should not be exposed to direct sunlight, very high or low temperatures, moisture, vibrations or placed in a dusty environment.
8. Do not use abrasive, benzene, thinner or other solvents to clean the surface of the appliance. To clean, wipe it with mild non-abrasive detergent solution and a clean soft cloth.
9. Never attempt to insert wires, pins or other such objects into the vents or opening of the appliance.
10. Batteries should not be exposed to excessive heat such as sunshine, fire or the like.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.

**CAUTION** Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type of battery.

# Operation Instructions

---

## Power Connection

Plug the AC power cord into a household outlet AC source. This appliance is equipped with a battery backup system, it requires a 3V CR2032 flat lithium battery. Insert the battery in the battery compartment, making certain that the positive and negative (+ and -) battery terminals are attached to the corresponding terminals on the plate in the battery compartment. If an AC power failure occurs, the clock automatically switches to the battery power supply, the clock and timer memory will continue running. When the AC power resumes, the clock switches back to AC again.

## Time Setting

In standby mode, press and hold the SET.MEM / M+ button (9), "24 Hr" will blink. Press the Tune + (8) or Tune - (4) button to set the hour format between 12 hour (12 Hr) format and 24 Hour (24 Hr) format.

Press the SET.MEM / M + button (9) and the hours will blink.

Press the Tune+ (8) or Tune - (4) to set the current hour.

Press the SET.MEM / M + (9) button again then the minute digits will blink. Press the Tune + (8) or Tune - (4) to set the current minutes.

Once complete, press SET.MEM / M + (9) button once again to indicate the current time is set.

## Setting Alarm Time

1. To preview the alarm time. Press the ALARM button (2/3) once. Alarm light and numbers will flash.
2. While the display is showing the alarm time and you hold the ALARM button for 3 seconds and the hours will blink.
3. Press the Tune + (8) or Tune - (4) to set the alarm hour alarm hour. Press alarm button to set.
4. Press the ALARM button again; the minute digits will blink. Press the Tune + (8) or Tune -(4) to set the alarm minutes. Press the alarm button to set.
5. Press the ALARM button then press Tune + (8) or Tune - (4) button to change the sound mode (Buzzer, Radio) for the alarm.
6. Press Tune + (8) or Tune - (4) to change the volume. The alarm volume will gradually increase. Then press the ALARM button when done.

# Operation Instructions

---

7. To delay the alarm, press SNOOZE. It will come on again in approx. 9 minutes. You may repeat this cycle several times during the alarm cycle. To stop the alarm, press ALARM button .
8. To stop the alarm from coming on the following day, hold the ALARM button to turn it off. The alarm icon will disappear to indicate the alarm is disarmed.

## Listening to Radio

1. Press the ON/OFF button (10) to turn the radio on.  
Press the ON/OFF button (10) again to switch between AM/FM bands.
2. Use the Tune + (8) or Tune – (4) button to select the desired FM station. If you press and hold the Tune +(8) or Tune -(4) button for one second, the release, the radio on will automatically scan to the next broadcasting station.
3. Press and hold the ON/OFF button (10) to turn the radio OFF.

Note : Ensure that the FM antenna is completely unrolled and extended for best FM reception.

## To set / recall the radio presets

1. Press the ON/OFF button (10) to turn the appliance ON.
2. Use the Tune +(8) or Tune -(4)button to select the desired FM station.
3. Press and hold the SET.MEM/ M + button (9); "P02" will blink in the display.
4. Press the SET.MEM / M + button (9) again to set the preset.
5. Repeat steps 2 through 4 to set more presets.
6. The appliance can preset upto 10 stations for FM and 10 for AM.
7. When "P01-P10" is blinking, press the Tune+ (8) or Tune-(4) button to select the preset number.
8. When recalling preset stations, press SET.MEM / M + button(9) to select the preset number.

# Operation Instructions

---

## Sleep Operation

When listening to radio, press Snooze / Sleep button (1) to enter sleep mode. You can just adjust the sleep timer from 90 mins to 10 mins by pressing the Snooze / Sleep button (1). The appliance will automatically turn off after the selected time.

## Snooze Function

When the alarm rings, press Snooze button (1) to suspend the alarm & to activate the snooze function, Alarm will stop and then will begin to ring again 9 minutes later. Press SNOOZE key again and alarm will be suspended for another 9 minutes before the alarm will ring again and so on until the next alarm rings.

Note: The Snooze interval time is 9 minutes.

- To turn the Snooze function off, press once on AL.1 / AL.2 button (2/3).
- Press and hold the AL.1 / AL.2 button (2/3). The alarm icon will disappear to indicate the alarm is disabled.

# Troubleshooting

---

## Reset

If the system does not respond or exhibits erratic or intermittent operation, you may have experienced an electrostatic discharge (ESD) or a power surge that triggered the internal microcontroller to shut down automatically. If this occurs, simply disconnect the AC power cord and remove the system backup battery, wait for at least 3 minutes and then setup the appliance again as if it is a brand new appliance.

# Technical Specifications

---

## Specifications

Frequency range :	AM 522 - 1620 kHz FM 87.5 – 108 MHz
Battery backup :	3V (CR2032 Flat Lithium battery x 1)
Power supply :	AC 240V ~ 50Hz



**THE 'V' STANDS  
FOR VALUE.**

M.E.W. (Australia) Pty Ltd  
15 Vaughan Street  
Essendon Fields VIC 3041  
ACN 152 719 036

1300 725 885  
customer@gvaproducts.com.au  
GVAPRODUCTS.COM.AU

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.