

# Radiant Floor Heater

/ GVAD15



Instruction Manual

12  
MONTH

MANUFACTURER'S  
WARRANTY

**GVA**

THE 'V' STANDS  
FOR VALUE.

## INTRODUCTION

- Before using your new heater, please carefully read through the following instructions.  
**KEEP THIS BOOKLET IN A SAFE PLACE SO THAT YOU MAY CONSULT IT LATER.**
- After removing the packaging, make sure that the appliance is in good condition.
- The packaging materials may contain plastic, nails etc., which may be hazardous and therefore should not be left within the reach of children.

## IMPORTANT SAFETY INFORMATION

- Avoid installation behind a door.
- Use only the voltage specified on the rating plate of the heater.
- Do not cover or restrict airflow to the inlet or exhaust grilles in any manner as the appliance may overheat and become a fire risk (for Fan Heaters).
- Do not cover grilles, block entry or exhaust of airflow by placing appliance against any surface. Keep all objects at least 1 metre from the front, sides and rear of the appliance. With exception of appliances designed for wall-mounting, maintain a 1 metre gap from the rear of the unit as well.
- **WARNING: FIRE RISK EXISTS IF THE HEATER IS COVERED BY OR POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE MATERIALS**
- Do not place appliance close to a radiant heat source.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- This appliance heats up when in use. To avoid burns, do not let bare skin touch hot surfaces. Switch off and use handles where provided when moving.
- Do not use the appliance to dry clothes.
- Do not leave the appliance unattended whilst in use.
- Do not insert or allow foreign objects enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not immerse in liquid or allow liquid to run into the interior of the appliance, as this could create an electrical shock hazard.
- Do not use this appliance on a wet surface, or where it can fall or be pushed into water.
- Do not reach for an appliance that has fallen into water. Switch off at supply and unplug immediately.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunction or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair before further use.
- Do not operate appliance with wet hands.
- Do not use heater on thick carpet or rugs.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- A common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum-cleaning air vents and grilles, where available.
- Do not use this appliance in a window as rain may cause electric shock.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not connect the appliance to the mains source until it has been installed in its final location and adjusted to the position it will be used in.
- This appliance is not intended for use in bathrooms, laundry or similar locations which may be exposed to water, moisture or humidity.

- Always operate on a flat horizontal surface.
- Switch off the appliance, then use handles (where provided) to change its position.
- Do not operate with the cord coiled up as this could cause a build up of heat, which could pose a hazard.
- The use of an extension cord with this appliance is not recommended.
- Do not remove the power plug from the socket by pulling the cord – grip the plug instead.
- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces during operation.
- Do not run cord under carpeting, throw rugs or runners etc. Arrange cord away from areas where it is likely to be tripped over.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that the cord has been fully removed from any cord storage area before use.
- Do not store appliance in a box or closed space until it has cooled down sufficiently.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the appliance.
- The appliance must not be located immediately below a socket-outlet.
- Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
- If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- For additional protection, the use of a Residual Current Device (RCD) with a tripping current not exceeding 30mA is recommended.

## OVERVIEW



## OPERATION

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure that all packaging has been removed from the unit before use.

Check that the heat control switch is set to the '0' position before plugging the heater into the mains supply.

- The Power / Heat Control Switch positions are:

- 0 Off
- I Low heat (800W)
- II Medium heat (1600W)
- III High heat (2400W)

Rotating the control switch one click in a clockwise direction will turn one element on to begin the heating process.

Rotating the control switch another click (clockwise) will turn the second element on.

Rotating the control switch another click (clockwise) will turn the third element on.

*For greater economy, use High heat initially, and then switch to a lower heat setting.*

## CLEANING & MAINTENANCE

- The heater requires regular cleaning to ensure trouble free operation:
- Unplug the heater from the mains supply before cleaning.
- Ensure that the heater has been allowed to cool before cleaning.
- Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.
- Use a vacuum cleaner to remove dust and fluff from around the grilles.
- Ensure the heater is dry before plugging back into the mains supply.

## SPECIFICATIONS

Model: GVAD15

Rating voltage: 240V~ 50Hz

Rating Power: 2400W

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

### Environment

Meaning of crossed-out wheeled dustbin:



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local council for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

## **WARRANTY INFORMATION**

Thank you for your purchase.

This product is warranted against defects in materials and manufacture for a period of 12 months from the date of original purchase in Australia or New Zealand, provided that it is used in accordance with the provided instructions and the defect is not a result of misuse, neglect, accident, alteration or improper installation.

If you experience any faults or defects with this product, we request that you contact our Authorised Service Centre in the first instance by calling, writing or emailing:

This warranty relates to products used for domestic purposes only. The benefits conferred by this warranty are in addition to and do not restrict, limit or modify any other conditions, warranties, guarantees, rights or remedies expressed or implied by the Competition and Consumer Act 2010 (Australia) or the Consumer Guarantees Act 1993 (New Zealand) or any other relevant consumer protection legislation in Australia or New Zealand. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **Please note:**

- Proof of purchase is required to establish date and location of purchase, for warranty purposes. We recommend that you retain your receipt as proof of purchase.
- As GVA does not undertake that repair facilities and parts will be available for the product, the decision to repair, replace or refund the product will be at the sole option of GVA or its Authorised Service Centres.
- The product will be at the owner's risk whilst in transit to or from GVA or its Authorised Service Centres.
- GVA and its Authorised Service Centres may charge you for labour, parts, transportation and handling costs for work done when the product is found to be in working order.
- Where postage/delivery of the item is deemed necessary, the owner will bear the expense of transporting the item to GVA or its Authorised Service Centre; return freight will be covered by GVA or its Authorised Service Centre.

M.E.W (Australia) Pty Ltd  
15 Vaughan St  
Essendon Fields VIC 3041  
ACN 152 719 036  
[www.gvaproductions.com.au](http://www.gvaproductions.com.au)

*While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.*