

210L Refrigerator/ Freezer

/ GVAFD2-27



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.


Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Getting Started	7
Basic Set Up	9
Reversing the Door Swing	10
Troubleshooting	11
Care and Maintenance	13


Guide to the Appliance

NOTE: Due to production improvements, the unit you purchased may vary slightly from the below sketch.

Product Overview

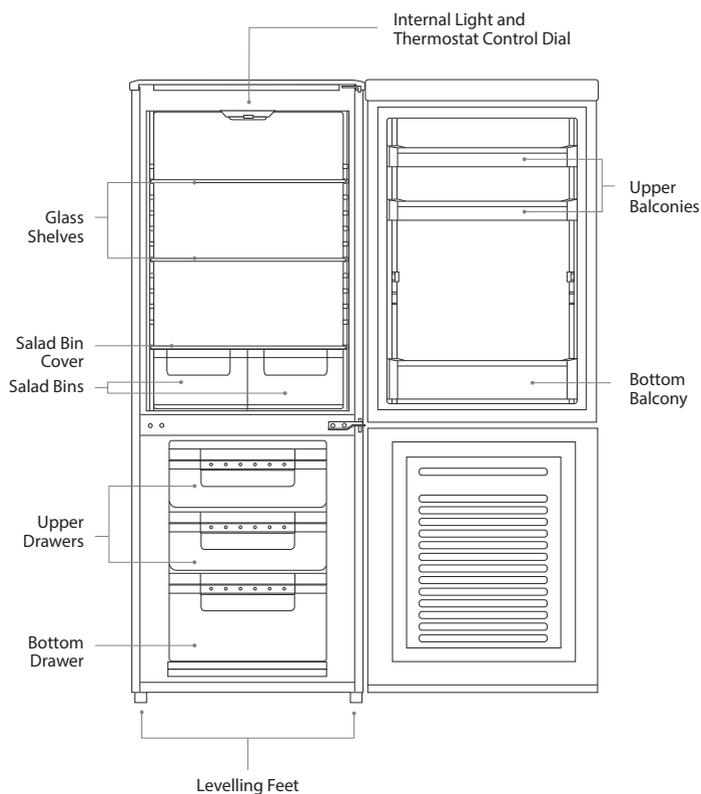

Egg Tray

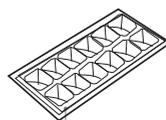

Ice Tray

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling and recovery of the refrigerant. This appliance contains the flammable refrigerant isobutane (R600a) and cyclopentane (R141b) in the cabinet insulation, and must be disposed of in a separate waste collection. Contact your local authorities for advice on recycling facilities in your area.

Take care not to damage the pipework at the back of the appliance before or during transportation so that the refrigerant gas cannot escape.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

DANGER. Risk of child entrapment: When discarding a fridge or freezer, make sure to take off the door and the spring action or bolt catch. Leave the shelves in place so that children cannot easily climb in, get trapped inside and suffocate.

Safety Information and Warnings

Read this manual thoroughly before first use, even if you are familiar with this type of product. We have provided many important safety statements in this manual concerning the use of this appliance. Always read and observe all safety statements. They reduce the risk of fire, electric shock and injury when correctly adhered to.

Keep the manual in a safe place for future reference, along with the purchase receipt.

If applicable, pass these instructions on to the next owner of the appliance.



Pay particular attention to safety messages that follow this safety alert symbol or the words **DANGER**, **WARNING** or **CAUTION**. These words are used to alert you to a potential hazard that can seriously injure you and others.

The instructions will tell you how to reduce the chance of injury and let you know what can happen if the instructions are not followed.

DANGER means that failure to read this safety statement may result in severe personal injury.

WARNING means that failure to read this safety statement may result in extensive product damage or serious personal injury.

CAUTION means that failure to read this safety statement may result in minor or moderate personal injury, property or equipment damage.



CAUTION:
Flammable Gas

This symbol alerts you to take care as the appliance contains a flammable refrigerant. Do not expose it to high heat, sparks or open flames.

We assume no liability for any eventual damages caused by misuse of the appliance or non-compliance with the instructions in this manual.

Safety Information and Warnings



Installation

Heavy: This appliance is heavy, take care when moving it. To avoid back or other injury, consider a two person lift or mechanical aid when installing it.

Location: The room for installing appliance must be at least 1M³per 8g of refrigerant. The amount and type of refrigerant in the appliance can be found on the rating plate on the back of the appliance.

Moisture: Install the refrigerator in an indoor area protected from wind, rain, water spray or drips.

Heat: Do not install it next to an oven, grill or other source of high heat.

Ventilation: To ensure proper ventilation, the front of the unit must be completely unobstructed. Keep any ventilation openings clear of obstructions. Choose a well ventilated area with temperatures above 16°C and below 32°C.

Refrigerant circuit: Do not damage the refrigerant circuit.

Level: Install the appliance on a level surface or adjust the feet to level the unit and ensure proper operation.

Pipes: Make certain that the pipes are not pinched, kinked or damaged during installations. Check for leaks after connection.

Electrical safety

Voltage: Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. Plug the refrigerator into a 220-240V, 50Hz, 3-prong, power outlet with a 15A fuse at the mains. The outlet must be properly earthed to the ground.

Separate circuit: Do not use an adaptor; do not use an extension cord. We recommend you connect the refrigerator to a separate circuit serving only this appliance. This provides the best performance and prevents overloading the house wiring circuits that could cause a fire hazard from overheating. Use a power point that cannot easily be turned off accidentally.

Power cord: Do not kink or damage the power cord. Do not leave it exposed or dangling. Secure it behind the unit so no one steps on or places anything on the cord or against it. Never unplug the unit by pulling the cord. Always grip the plug firmly and pull straight out from the power point.

Damaged cord: Do not use a cord that shows cracks or abrasion damage along its length or at either end. If the power cord is damaged, it must be replaced by the manufacturer or its service agent. Contact the after sales support line to have it replaced.

Electrical work: If the installation of this appliance requires any electrical work, make sure it is carried out by a qualified electrician.

Safety Information and Warnings



Usage conditions and restrictions

Indoor domestic use only: This appliance is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use.

Intended purpose: Do not use this appliance for anything other than its intended purpose and only use it as described in this manual. Do not attempt to alter or modify this appliance in any way.

Electrical type appliances: Do not use any such appliances inside the food storage compartments of the appliance, unless they are specifically recommended in this manual.

Usage restrictions: The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children: Supervise children to ensure they do not play with the refrigerator. Never allow children to operate, play with or crawl inside the refrigerator.

Cleaning and maintenance

Disconnect: Unplug the refrigerator or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock, injury or death. Do not connect or disconnect the electric plug when your hands are wet.

Flames: Do not let open flames or ignition sources enter the appliance.

Flammable/explosive substances: Never clean this appliance with flammable fluids. Do not store or use volatile, flammable or explosive propellants or liquids close to this or any other appliance. The fumes can create a fire hazard or explosion caused by electric sparks.

Solvents: Do not use solvent based cleaning agents or abrasives on the interior. These cleaners may damage or discolour the interior.

Service: Do not attempt to repair or replace any part of the refrigerator unless it is specifically recommended in this manual. Refer all other servicing to a qualified technician, or contact the after sales support line for advice on repair or replacement. It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland - the authorized Service Person MUST hold a Gas Work Authorisation for hydrocarbon refrigerants, to carry out Servicing or repairs which involve the removal of covers.

Getting Started

Before first use

- Unpack the appliance but keep all packaging materials until you have made sure your new refrigerator is undamaged and in good working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Check to ensure you have all the parts listed on the 'Guide to the Appliance' page, plus an instruction manual and a warranty certificate.
- Read this manual to familiarise yourself with all the parts. Pay particular attention to the safety instructions on the previous pages.
- Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Make sure the refrigerator is disconnected from the power supply before cleaning the interior surfaces with lukewarm water using a soft cloth to remove any dust from transit and storage. Dry the appliance thoroughly.
- Your refrigerator has the capability of the door opening from the right or left side. If your setup requires reversal of the door swing, follow the instructions on page 10.
- Your new refrigerator is now ready for use – see page 9 for set up instructions.

Overloading the refrigerator will affect cold air circulation and cooling performance. We therefore recommend you only load refrigerator up to about 70% of its storage volume, always leave some space around food stored, and do not use containers that are too large and block ventilation openings.

Installing the refrigerator

- Before installing your new upright refrigerator, read all safety instructions in this manual, especially the sections on electrical safety and installation. Then follow the instructions below.
 - This appliance is designed to be freestanding only and should not be recessed or built in.
 - Place the refrigerator on a sturdy, level floor that is strong enough to support the unit when it is fully loaded.
 - DO NOT install the appliance directly on carpeting or soft material. Carpeting must be removed or protected by a metal or wood panel beneath the appliance, which extends at least the full width and depth of the appliance.
- NOTE:** Ensure that the appliance does not stand on the electrical supply cable. Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation.

Getting Started

 

- Locate the refrigerator:
 - Away from direct sunlight, which may affect the acrylic coating.
 - Away from sources of heat (stove, heater, radiator, dishwasher, etc.), which may increase power consumption.
 - In an area without extreme cold ambient temperatures, which may affect cooling performance.
 - In a cool, well ventilated area, without excessive moisture and high humidity.
- Installing the unit in the coolest area of the room will save energy consumption and running costs.
- To ensure correct operation, this appliance must not be located where the temperature will be below 10°C or above 43°C.
- Ensure there are no obstructions that could prevent the refrigerator door from closing.
- To level the refrigerator, adjust the levelling legs at the bottom of the unit.
- The refrigerator must have at least 50mm clearance between the rear of the appliance and the wall, 100mm between the sides and wall, and the space above the top should be at least 100mm. Ensure that there is enough spacing to open the door to 160°.
- **Before plugging in your new refrigerator, let it stand upright for approximately 2 hours.** This will allow the refrigerant gases to settle into the compressor and reduce the possibility of a malfunction in the cooling system from handling during transportation.
- The refrigerator is suitable for connection to 220-240VAC 50Hz supply. The refrigerator must be plugged into a dedicated individual 220-240VAC main socket outlet.
- Plug the unit into an exclusive, properly installed and earthed wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. If in doubt about your setup, direct any questions concerning power and/or grounding to a certified electrician.
- Do not use an extension cord or an adapter plug.
- Secure the refrigerator's supply cord behind the unit. Do not leave it exposed or dangling to prevent injury and accidental disconnection from the power supply.

Note: After plugging the appliance into a wall outlet, allow the unit to cool down for 2 to 3 hours before placing food in the refrigerator compartment.

Basic Set Up

Switching On Your Unit

1. Before connecting the unit to the mains supply, adjust the thermostat control dial to the desired position. Bear in mind that the higher the number, the lower the temperature. Position **3** is the recommended setting when operating at normal room temperature (between 16°C and 38°C).
2. The unit may not operate at the correct temperature if it is in a particularly hot or a particularly cold room, or if you open the door often.
3. To ensure that the unit is cool enough to sufficiently chill your food, wait 24 hours before filling it with food.
4. If you are concerned that your unit is not being kept cold enough and wish to check the temperature, you will need a special fridge/freezer thermometer. These are available from most supermarkets and hardware shops.

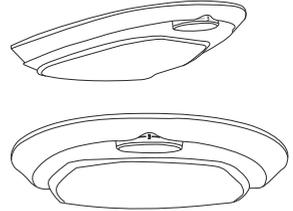

Place the thermometer in the centre of the unit, where it can be read easily. Leave overnight, the temperature in the unit should be an average of 5°C.

Adjusting the Temperature

The internal temperature of the unit is controlled by a thermostat. The recommended position is between 1 to 4 for colder working environments (i.e. during winter) and between 5 to 7 for hotter environments. Please adjust according to the environment.

Fresh food storage

The fresh food (refrigerator) compartment is suitable for short-term storage of fresh food. The temperature inside varies depending on the amount of food stored and the frequency of door opening.

In order to maintain good cooling efficiency and save energy, we recommend you do not open the door for too long or too often. Do not overload the refrigerator, and keep enough space around items for cold air flow. Do not block ventilation openings.

Normal Operating Sounds

The following noises are characteristic of refrigeration appliances:

Clicks: Whenever the compressor is switched on or off, a click sound may be heard.

Humming: As soon as the compressor is in operation, you may hear it humming.

Bubbling/Splashing: When refrigerant flows into thin tubes, you may hear bubbling or splashing noises. Even after the compressor has been switched off, this noise may still occur for a short time.


Reversing the Door Swing

This refrigerator can be opened from either the left side (as supplied) or right side to suit your individual installation requirements. If you want to open the door from the right side, follow the instructions below and opposite to reverse the door swing (the numbers in brackets refer to the parts in the illustrations).


WARNING! Ensure the refrigerator is disconnected from the power supply when reversing door swing.

NOTE: Keep all parts you remove for re-installation of the door on the other side.

1. Remove the two screws (3) holding the top hinge (4) (right side) to the frame. Remove the top hinge (4).
2. Lift the door off the middle hinge pin and place it on a non-scratching surface.
3. Remove the two screws (5) holding the middle hinge (6). Remove the middle hinge (6).
4. Lift the lower door off the bottom hinge pin and place it on a non-scratching surface.
5. Remove the two screws (7) holding the bottom hinge (8). Remove the bottom hinge (8).
6. Remove the left front leg (9) and transfer it to the right side.
7. Before replacing the bottom hinge (8), remove the hinge pin (10) and reverse the direction of the hinge (8). Reassemble the bottom hinge (6) on the left hand side using the two screws (7).
8. Refit the hinge pin (10) into the bottom hinge (8).
9. Lower the door onto the bottom hinge pin (10).
10. While holding the lower door in the closed position, reassemble the middle hinge (6) on the left hand side using the two screws (5). Do not tighten the screws (5) until the top of the lower door is level with the counter top.
11. Before replacing the upper hinge (4), remove the hinge pin (2) from right hole to left hole of the upper hinge (4).
12. Lower the upper door onto the middle hinge pin.
13. While holding the upper door in the closed position, reassemble the upper hinge (4) on the left hand side using the two screws (3). Do not tighten the screws (3) until the top of the upper door is level with the counter top.

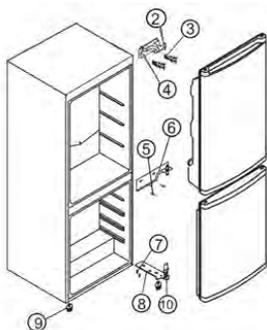

Door opening from left side fig. 1

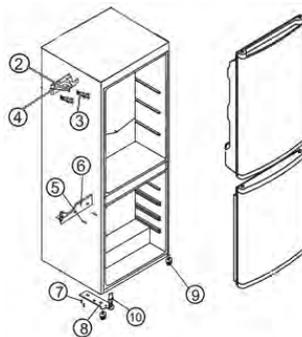

Door opening from right side fig. 2

Troubleshooting

If you experience a problem with your refrigerator, check in the following table for solutions to help you solve the problem. If after these checks you still have a problem with your refrigerator, call the after sales support line for advice.

Problem	Possible cause
The refrigerator does not operate.	<ul style="list-style-type: none"> • It is not plugged in. Ensure it is properly plugged in and there is power at the socket (plug another appliance into the outlet to check). • The circuit breaker tripped or has blown a fuse. • The refrigerator temperature control is set to OFF. • A general power outage has cut power to your home (check the household lights).
The refrigerator temperature is not cool enough.	<ul style="list-style-type: none"> • The room temperature is hotter than normal. • A large amount of food has been added at once. • The door is opened too often. • The door is not closed completely. • The temperature control is not set correctly. • The door gasket does not seal properly.
There are vibrations.	<ul style="list-style-type: none"> • The refrigerator is not level.
The refrigerator seems to make too much noise.	<ul style="list-style-type: none"> • A rattling noise may come from the flow of the refrigerant, which is normal. A popping and crackling noise may be caused by the contraction and expansion of the inside walls. • The refrigerator is not level, or is touching other furniture. • Bottles or packages inside the refrigerator are touching each other.
The door will not close properly.	<ul style="list-style-type: none"> • The refrigerator is not level. • The door was reversed and is not properly installed. • The gasket is dirty or bent. • The shelves, racks or crisper are out of position.
The refrigerator door will not open.	<ul style="list-style-type: none"> • If the door has just been opened, leave it for a few minutes to allow the air pressure to equalise before trying again.
Moisture forms on the inside or outside walls of the refrigerator.	<ul style="list-style-type: none"> • Open the door less often and make sure it is always properly closed.

Troubleshooting

<p>The external refrigerator surface is warm.</p>	<ul style="list-style-type: none">• The exterior walls can be warmer than room temperature. This is normal while the compressor works to transfer heat from inside the refrigerator cabinet.
<p>The compressor runs continuously.</p>	<ul style="list-style-type: none">• The temperature is set too cold: select a lower (warmer) setting.• The door is open, or something is obstructing proper door closure.• The door gaskets are worn, dirty or damaged.• Large quantities of food have been added to the refrigerator.• The room temperature is hotter than usual.

Care and Maintenance

Cleaning the refrigerator

- **CAUTION:** Before cleaning the refrigerator, make sure to turn the temperature control to the [0] position, unplug the refrigerator and remove the food and shelves.
- Remove all the shelves and drawers.
- Wipe the inside of the unit with a weak solution of bicarbonate soda and then rinse with warm water using a sponge or cloth. Wipe completely dry before replacing the shelves and drawers.
- Use a damp cloth to clean the exterior, and then wipe with a standard furniture polish. Make sure that the door is closed to avoid the polish getting on the magnetic door seal or inside the unit.
- The grille of the condenser at the back of the unit and the adjacent components can be vacuumed using a soft brush attachment.

Power failure

Most power failures are corrected within a few hours and should not affect the temperature of your fridge if you minimise the number of times the door is opened. If the power is going to be off for a longer period of time, take appropriate steps to protect your food.

Care and Maintenance

Energy saving tips

- Place the refrigerator in the coolest area of the room, away from heat-producing appliances and out of direct sunlight
- Let hot foods cool down a little before placing them into the refrigerator. Overloading the refrigerator forces the compressor to run longer.
- Wrap foods properly and wipe containers dry before placing them in the refrigerator.
- Do not line any refrigerator storage bin with aluminum foil, wax paper or paper towels. Liners interfere with cold air circulation, reducing cooling efficiency.
- Do not leave the refrigerator door open for longer than required.

When away on holidays

- **Short holidays:** leave the refrigerator operating during vacations of less than three weeks.
- **Long holidays:** if the appliance will not be used for several months, remove all food, unplug the unit and thoroughly clean and dry the interior. To prevent odour and mould growth, block the door open slightly.

Moving the refrigerator

- Remove all food from inside the refrigerator, tape the door shut and securely tape down all loose items inside. Turn the levelling feet up to the base.
- We recommend moving the refrigerator in its original packaging. Otherwise, make sure to protect the outside of the refrigerator with a blanket or similar item during transportation.
- Do not apply force on any external part such as pipes, condenser or door when moving.
- Ensure the refrigerator stays secure in an upright position; do not tilt it for more than 45° from upright.

Switching off the appliance

To switch off the appliance, turn the temperature regulator to position "0". If the appliance is not going to be used for an extended period:

- Remove all refrigerated items
- Switch off the appliance by turning the temperature regulator to position "0"
- Remove the mains plug or switch off or disconnect the electricity supply.
- Clean thoroughly.
- Leave the door open to avoid the build up of odours.
- Once the unit has been turned off, allow the unit to settle down for about 10 minutes before turning the unit on. This will prevent the compressor from being damaged.



**THE 'V' STANDS
FOR VALUE.**

M.E.W. (Australia) Pty Ltd
15 Vaughan St
Essendon Fields VIC 3041
ACN 152 719 036
www.gvaproductions.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.