

Ceramic Fan Heater

/ GVAH03



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Important Safety Instructions

Store this instruction manual in a safe place, along with your warranty card, purchase receipt and packaging box for future reference. Please pay particular attention to the safety information.

- This product is intended for household, industrial and commercial use only. It is not intended for outside use.
- To protect against electric shock, do not place heater in window, immerse unit plug or cord in water or spray with liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the heater from the outlet when not in use, when moving heater from one location to another and before cleaning.
- Do not operate the heater in the presence of explosive and/or flammable fumes.
- Do not place the heater or any parts near an open flame, cooking or other heating appliance.
- Do not operate the heater with a damaged cord, plug, after a malfunction or if dropped or damaged in any manner.
- The front grid gets very hot when in use, so treat this heater as you would an electric bar fire.
- To disconnect grip the plug and pull it from the wall outlet. Never yank the cord.
- Always use on a dry level surface.
- Do not operate if the heater housing is removed or damaged.
- Warning: To reduce the risk of fire or electric shock, do not use this heater with any speed control or timer.
- Do not leave the heater running unattended.
- Ensure that the heater is switched off from the supply mains before removing the guard.
- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Disconnect heater when moving from one location to another.
- Be sure heater is on a stable surface when operating to avoid overturning.
- Do not cover the heater when in use and make sure that there is at least 12 inches of clearance behind it so that the air intakes are not obstructed.
- Ensure that no object of any kind is within two meters of the heater when it is use.
- Do not position it directly below a power socket

Operation of your Heater

Parts

1. Thermostat Temperature Control
2. Oscillation Control Button
3. Heating Power Knob
4. Body
5. Heating Element



Buttons and Functions

0 = OFF

⏏ = Fan only, no heat

I = Low heat output

II = Full heat output

SWING = Oscillation Control

+ = Increase the thermostat temperature

- = Decrease the thermostat temperature

Temperature Setting

- 2 Heat Settings: 700W and 1500W. Turn the heating power knob to I or II to select the 2 heat settings.
- Turn thermostat temperature control to set the desired thermostat temperature.
- When the heating power knob is set to ⏏, the heater will only work as a fan with no heat.
- When the heating power knob is set to 0, the heater will be turned off.

NOTE: It's always important to unplug the power after using the heater, or when unattended.

Safety device

This appliance has 2 protection devices.

- The first device automatically disconnects and reconnects the appliance at a preset temperature.
- The second safety device disconnects the appliance permanently in case of overheating, by means of a thermal fuse. (It is not re-settable)

WARNING: NEVER COVER THIS HEATER!

Covering the heater will cause activation of the non re-settable safety fuse.

Care & Cleaning Instructions

- There are no parts inside the heater that require your attention or servicing. Do not try to open the outer case. By doing so you could damage the motor and heating element and invalidate the warranty. If you have a problem with the heater, or if the power cord gets damaged in any way, you **MUST** take the unit to a suitably qualified engineer or electrical repair centre.
- Before cleaning the heater, please make sure it is disconnected from the power supply, and has cooled down completely.
- When cleaning the heater, please make sure it is disconnected from the power supply, and has cooled down completely.
- Never clean the heater with water and do not let it get wet under any circumstance.
- The outside case can be cleaned using a slightly damp lint-free cloth (a small amount of detergent can be used if required).
- To remove any dust particles etc. from inside the front grill, or the rear air intakes, you can use a regular vacuum cleaner.
- Always make sure the heater is completely dry before using.
- If you are not going to use the heater for a while it is best to make sure it is clean and dry and then store it inside a plastic bag in a cool dry place.
- With sensible care and attention this heater will give you many years of good service and economical heating.