

Ceramic Tower Heater

GVAKPT2BR



Instruction Manual

12

MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Technical Data

Type	Voltage	Frequency	Power
GVAKPT2BR	220-240V	50 Hz	2000W

GENERAL SAFETY INFORMATION

1. Read all instructions before using Heater.
2. Use this Heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
3. Make certain that the power source conforms to the electrical requirements of the Heater.
4. Extreme caution is necessary when any Heater is used by or near children or invalids and whenever the Heater is left operating unattended.
5. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children shall be supervised to ensure that they do not play with the appliance.
7. If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.
8. Do not operate any Heater with a damaged cord or plug or after the Heater malfunctions, has been dropped or damaged in any manner. Return Heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
9. Unplug power cord before servicing or moving the Heater. Always unplug Heater when not in use.

WARNING: DO NOT DEPEND ON THE ON/OFF SWITCH AS THE SOLE MEANS OF DISCONNECTING POWER WHEN SERVICING OF MOVING THE HEATER. ALWAYS UNPLUG THE POWER CORD.

10. Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire, or damage the Heater. Do not block or tamper with the Heater in any manner while it is in operation.
11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked.
12. Always place the Heater on a stable, flat, level surface when operating, to avoid the chance of the Heater overturning. Locate the Power Cord so the Heater or other objects are not resting on it. Do not run Power Cord under carpeting. Do not cover Power Cord with throw rugs, runners, or the like. Arrange Power Cord away from room traffic and where it will not be tripped over.
13. This Heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always use handle when moving this Heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 m) from the front of the Heater and keep them at least 1 foot (0.3 m) from the sides and rear.
14. A Heater has hot and arcing or sparking parts inside. It must NOT be use in potentially dangerous locations such as flammable explosive, chemical-laden or wet atmospheres. Heater is intended for general use ONLY.
15. Never immerse the product in water or any other liquid for any reasons. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

16. **WARNING:** In order to avoid overheating, do not cover the heater.

17. The heater must not be located immediately below a socket outlet.

 
18. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING

 
WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning.

PARTS NAME

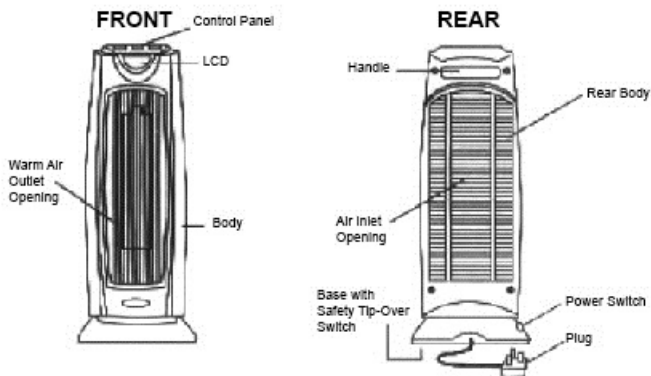

OPERATION

The Heater may be operated by the controls located on the Heater (as shown in FIGURE 1) or by your remote control (shown in FIGURE 3).

1. Carefully remove the Heater from the plastic bag and the carton.
2. Place the heater on a firm level surface.
3. Set the main power switch to 'OFF'. Plug the cord into a AC 220-240V electrical outlet. Turn the main POWER switch to 'ON' position. A 'Beep' sound and the red light will come on indicating that there is power to the unit. The Heater is ready to use. The red light will remain lighted until the main POWER switch is turned OFF and the Heater is unplugged from the electrical outlet.
4. Turn the Heater ON by pressing the ON/OFF button  (FIGURE 1). The unit will display the current ROOM temperature, automatic into "FAN" mode, and blow the cold air.

- Then pressing the button "HEAT MODE" button first time, the unit will be in the low heat mode.
- Pressing the 'HEAT MODE' button second time, the unit will set the Heater into high heat model.
- Pressing the 'MODE' button once more will set the Heater into AUTO mode. Notice that the display now displays a 'SET TEMP' indicator. (See Thermostat Instructions).
- To turn the Heater OFF, press the ON/OFF button.

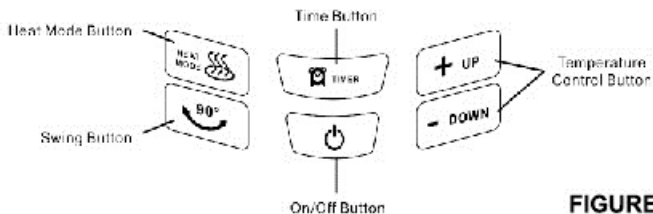 


FIGURE 1



SWING FUNCTION

This function will work in any mode. Pressing the **Swing** button, the indicator "↔" will be display on the screen ,the heater will be allowed to oscillate left and right. To stop the oscillation, press the **Swing** button once more.

TIMER FUNCTION

This function will work in any mode. The timer function allows you to set the length of operation from 1 hour to 8 hours. Pressing the **Timer** button increase the length of operation by 1 hour each time when the button is pressed. Once the timer has been set, the timer will count down the hours in 1 hour increments, showing on the display the remaining operating time until the Heater will turn itself off. Pressing the **Timer** button once more after the display reflects 8 hours will reset the Heater to continuously running.

THERMOSTAT INSTRUCTIONS (FIGURE 2)

- Press the **HEAT MODE** button until the display shows **AUTO**
- To adjust "**SET TEMP**", press the  to increase the desired temperature and the  to decrease the desired temperature. (**FIGURE 2**)
- When the air temperature reaches 3 degrees above the **SET TEMP**, the heater will cut off.
- When the air temperature drops 1 degree below the **SET TEMP**, the unit will come back on.

Note: It is normal for the **Heater** to cycle ON and OFF as it maintains the **SET TEMP.**

 


Figure 2

REMOTE CONTROL

REMOTE CONTROL (FIGURE 3)

1. Install two "AAA" (not included) batteries as shown in FIGURE 3.
2. The Remote Control Power button is labeled as below.

All the functions performed with the Remote Control work identically to the Manual Controls.

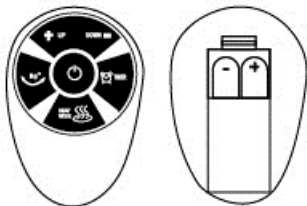 


FIGURE 3

SAFETY FEATURES

1. A thermal overload protector is built in to prevent overheating.
2. When an overheat temperature is reached, the Heater will be automatically shut off. It can only resume operation when the user resets the unit.

(See reset instructions below)

To Reset Heater :

1. Unplug the Heater and wait 15-20 minutes for the unit to cool down.
2. Then, turn on the unit again and operate normally.

WARRANTY INFORMATION

Thank you for your purchase.

This product is warranted against defects in materials and manufacture for a period of 12 months from the date of original purchase in Australia or New Zealand, provided that it is used in accordance with the provided instructions and the defect is not a result of misuse, neglect, accident, alteration or improper installation.

This warranty relates to products used for domestic purposes only. The benefits conferred by this warranty are in addition to and do not restrict, limit or modify any other conditions, warranties, guarantees, rights or remedies expressed or implied by the Competition and Consumer Act 2010 (Australia) or the Consumer Guarantees Act 1993 (New Zealand) or any other relevant consumer protection legislation in Australia or New Zealand. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Please note:

- Proof of purchase is required to establish date and location of purchase, for warranty purposes. We recommend that you retain your receipt as proof of purchase.
- As GVA does not undertake that repair facilities and parts will be available for the product, the decision to repair, replace or refund the product will be at the sole option of GVA or its Authorised Service Centres.
- The product will be at the owner's risk whilst in transit to or from GVA or its Authorised Service Centres.
- GVA and its Authorised Service Centres may charge you for labour, parts, transportation and handling costs for work done when the product is found to be in working order.
- Where postage/delivery of the item is deemed necessary, the owner will bear the expense of transporting the item to GVA or its Authorised Service Centre; return freight will be covered by GVA or its Authorised Service Centre.

M.E.W (Australia) Pty Ltd
15 Vaughan St
Essendon Fields VIC 3041
ACN 152 719 036
www.gvaproductions.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.