

Stainless Steel Kettle

/ GVAKS1



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Important Safety Instructions

Store this instruction manual in a safe place, along with your warranty card, purchase receipt and packaging box for future reference. Please pay particular attention to the safety information.

- Do not attempt to repair, disassemble or modify the appliance.
- If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance outdoors.
- Power plug must be removed from power socket before cleaning, servicing, maintenance or moving the appliance.
- The appliance should be placed on a flat surface when operating to avoid overturning.
- The kettle is only to be used with the stand provided.
- The appliance must not be immersed in water for cleaning surface.
- CAUTION: Do not operate the kettle on an inclined plane, Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
- CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, office and other working environments;
 - Farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

Caution

- a. Always keep the unit away from children.
- b. Never overfill the kettle, making sure the water level is above the minimum mark but below the maximum level. Beware boiling as water may be ejected.
- c. Make sure that the unit will be on a flat and secure surface before being switched on.
- d. Make sure that all electrical connections are clean and dry.
- e. Make sure that the lid is correctly and securely fitted before switching the unit on.
- f. Never leave the filter loose in the kettle, it can only be placed on the lid tongue.
- g. Never remove the filter when the kettle contains hot water.
- h. Never fill the kettle while it is on its base. If the base unit becomes wet, unplug it prior to cleaning.
- i. Make sure that the kettle is disconnected from the main supply when it is not in use.

This kettle is for domestic use only.

Operating instructions

- a. Make sure that the filter is pressed into the holes of the lid tongue and fitted correctly.
- b. Fill the kettle with water, making sure the water capacity is not lower than the minimum mark and does not exceed the maximum level.
- c. Ensure the lid is closed.
- d. Plug in the appliance into the wall socket.
- e. Put the kettle body onto the base.
- f. Switch the unit on, making sure the indicator light is on.
- g. When the water is boiled, the unit will automatically cut-off and the indicator light will turn off.
- h. If the water has to be reheated, please switch the unit on after several minutes of cooling down.

Parts of your Kettle

1. Filter
2. Handle
3. Lid
4. Body
5. Switch
6. Base



Care & Cleaning Instructions

Always disconnect the kettle from the main supply when cleaning.

A. Cleaning the kettle

Scaling or furring up is a common problem, a water purifier and periodic cleaning will always be recommended.

- Scaling will damage the function of the heating element and impair the function of the dry boil protector.
- a. To clean the inside of the kettle, please fill the kettle with water, then add 2ml of white vinegar and let the mixture boil.
- b. Unplug the unit and empty the kettle.
- c. Re-clean at least three times with water to remove the particles.

B. Cleaning the filter

- a. Take out and place the filter under a tap and rub gently with your fingers. Be careful not to use anything that will tear the filter when cleaning
- b. Dip in a proprietary descaling agent and rub gently then rinse.
- c. Descale your filter at regular intervals in order not to impair the pouring performance of your kettle.