

Digital Kitchen Scales

/ GVAKSH68



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

BEFORE FIRST USE

Read and follow all the instructions in this “Use and Care” even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning “IMPORTANT SAFEGUARDS” and the “WARRANTY” and “SERVICE” statements.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Abnormal use or the use of other attachments may result in inaccurate results.

IMPORTANT SAFEGUARDS

When using any product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING - to reduce the risk of injury to persons or property:

- Always operate the product using the type of batteries as indicated on the product identification plate.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any product which appears damaged or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Never install the unit where it could be subject to:
 - * Heat sources such as radiators, heat registers, stoves or other products that produce heat.
 - * Direct sunlight
 - * Excessive dust
 - * Mechanical vibration or shock
 - * Uneven surface.
- Do not use the appliance for other than its intended use.
- Do not dispose of batteries in the garbage bin, please dispose of properly. Your local Council or Environmental Authority may be able to direct you to a suitable disposal site.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- This product is intended for normal domestic/household use only.

READ AND SAVE THESE INSTRUCTIONS

Inserting/Changing Battery:

The battery compartment is located on the back of the scale, marked 'Battery Cover'. The KSH68 Kitchen Scales have the required battery fitted but because of factors beyond our control, the battery may be low when first used. If the LCD display does not switch on or indicates "LO" when first used it will be necessary to replace the fitted battery. To replace the battery, remove the battery compartment cover by the appropriate screw driver and insert a new "3V CR2032 Lithium" type battery. Ensure that the polarity is correct and the battery is inserted correctly. Replace the battery compartment cover.

NOTE: When the "LO" symbol appears on the LCD, it means that the battery is almost exhausted and requires replacement. Replace with the same type of battery as per the instructions above.

Before Use:

- The scale must be placed on a solid, nonskid and level surface. Do not use on uneven or soft surfaces.
- Wipe and dry the glass platform of the scale to prevent slip.
- Ensure battery is correctly installed (see Inserting / Changing battery part).
- **Scale Capacity: 5.2kg**
- **Graduation: 1g**

Operation Instructions

a) Press the On/Tare/Off button to switch the scale on. The LCD will be activated and display



and then display , now the scale is ready to use.

b) Put the ingredient/s on the glass plate and allow the scale to balance; when the LCD stop changing the display, read the weight displayed on the LCD.

Note: If you want to weigh something in a container but do not want the weight of the container included: Zero/Tare the scale by placing the empty container on the glass plate and pressing the

On/Tare/Off button—the LCD will display . Then fill the container with the ingredient/s you want to weigh and read the weight displayed on the LCD—it is the weight of the ingredient/s you filled in the container (the weight of the container not included). If you remove the container from the glass plate, the scale will display the minus weight of the container.

c) Read the weight displayed on the LCD—see the weight displayed below:



It is 4208 grams.

CAUTION: If the weight exceeds the maximum scale capacity (5200g), the LCD will display "E- -".

Scale Feature

a) **Display Range:** -999 ~ 5200 grams.

Note: If the weight of the ingredient/s is less than (<) 2 grams, the LCD will display "0g".
If the weight of the ingredient/s is more than (>) 5200 grams, the LCD will display "E- - -".

b) Tare Function:

Pressing the ON/TARE/OFF button will allow the display to subtract the weight of the ingredient/s on the glass plate. This feature allows you to get the net weight of the ingredients in a bowl or container. And it is also useful for adding new ingredient on the scale: press the Zero/Tare button; add the new ingredient on the scale or into the container; the LCD will display the weight of the ingredient you just added.

c) Auto Power Off

The scale will switch off automatically in about 3 minutes if you do not press the ON/TARE/OFF button or add new ingredient on the glass plate.

To restart the scale, simply press the On/Tare/Off button.

d) Manual Switch Off

To switch off the scale manually, press and hold the On/Tare/Off button for about two seconds.

Care and Maintenance:

- Ensure the wet ingredients do not enter into the scale; if this happened, wipe the unit immediately with a towel or soft cloth.
- Only use a soft cloth to clean the scale. Avoid the use of harsh detergents, solvents, and polish, abrasive or aerosol cleaners as they may damage the surface of the product.
- If the scale is not to be used for a long time, remove the batteries and save.
- Do not attempt to disassemble or repair the scale; return the whole unit to the Supplier for repair or service.

Troubleshooting:

LCD Display	Reason	Remedy
LO	Battery is used up	Replace battery with a new one.
E - - -	Maximum weight capacity exceeded	Ensure weight is under maximum weight capacity : 5.2Kg/5200g/11lb

IMPORTANT: TO OBTAIN WARRANTY SERVICE

To ensure your product is covered by warranty, return the complete faulty product and your purchase receipt back to the retailer; otherwise a fee will be charged.

READ AND SAVE THESE INSTRUCTIONS