

BASIC MICRO HI FI SYSTEM

WITH AM/FM RADIO

GVAM686A



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.


Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Operation Instructions	7
Basic Set Up	10

Guide to the Appliance

Location of control

- 1.) LCD DISPLAY
- 2.) POWER/FUNCTION
- 3.) MODE/CLOCK/EQ
- 4.) SKIP-
- 5.) SKIP+
- 6.) STOP
- 7.) PLAY/PAUSE/SLEEP
- 8.) TUNING
- 9.) VOLUME +
- 10.) VOLUME -
- 11.) FM ANTENNA
- 12.) SPEAKER JACK (L/R)
- 13.) AUX IN
- 14.) AC POWER CORD

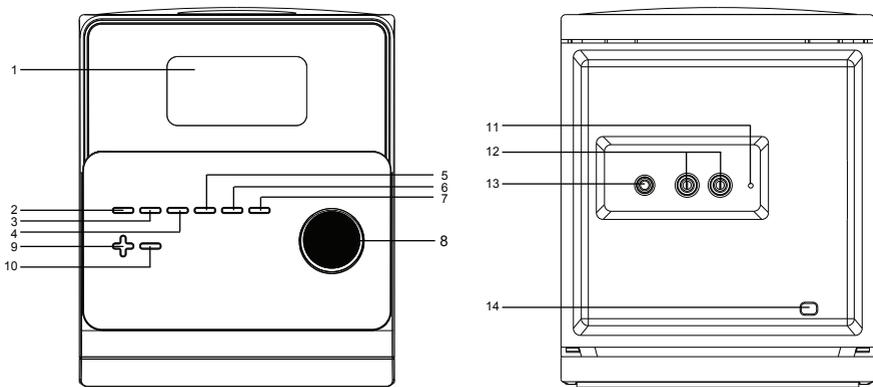

Power source

AC power

You can power your appliance by plugging the AC power cord at the back of the appliance into a wall AC power outlet. Check that the rated voltage of your appliance matches your local voltage.

NOTE: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Safety Information and Warnings

1. **WARNING:** Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
2. **WARNING:** This appliance is for indoor use only. Exposure to liquids or moisture will increase the risk of fire or electric shock. Do not place objects contains liquids on the appliance. If the appliance should inadvertently become wet switch off at the mains socket and remove the plug.
3. **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
4. **WARNING:** The mains plug is the disconnect device. It must be readily accessible at all times and not obstructed (i.e. by furniture etc.). To disconnect the appliance from the mains power supply the wall socket must be turned off and the power plug removed.



5. Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam of laser.



6.  Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
7. No naked flame sources, such as lighted candles, should be placed on the apparatus.
8. Attention should be drawn to environmental aspects of battery disposal.
9. The rating and marking information are located at the bottom of the unit.
10. Excessive sound pressure from earphone and headphones can cause hearing loss.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type

Safety Information and Warnings

To prevent fire or shock hazard do not expose this appliance to liquids or moisture.



Lightning flash with arrowhead symbol - within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Exclamation point - within an equilateral triangle, is used to indicate that a specific component shall be replaced only by the component specified in that documentation for safety reason.

The following label has been affixed to the unit, listing the proper procedure for working with the laser beam:



Class 1 laser product label -

This label is attached to the place as illustrated to inform that the apparatus contains a laser component.



WARNING label informing of radiation -

This label is placed inside the unit. As shown in the illustration. To warn against further measures on the unit. The equipment contains a laser radiating laser rays according to the limit of laser product of class 1.

Safety Information and Warnings

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instruction should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating instructions should be followed.
5. **WATER AND MOISTURE** - The appliance should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundrytub, swimming pool or in a wet basement.
6. **VENTILATION** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. Do not place on bed, sofa, rug or similar surface that may block the ventilation openings, in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. **HEAT** - The appliance should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.
8. **POWER SOURCE** - The appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
9. **POWER CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
10. **POWER LINES** - An outdoor antenna should be located away from power lines.
11. **OBJECT and LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
12. **ESD WARNING** - The display does not function properly or no reaction to operation of any the control may due to the electrostatic discharge. Switch off and unplug the set. Reconnect after a few seconds.
13. **DAMAGE REQUIRING SERVICE** - The appliance should be serviced by qualified service personnel when:
 - a. The power-supply cord or plug has been damaged.
 - b. Objects have fallen into, or liquid has been spilled into the appliance enclosure.
 - c. The appliance has been exposed to rain.
 - d. The appliance has been dropped, or the enclosure damaged.
 - e. The appliance does not appear to operate normally.
14. **SERVICING** - The user should not attempt to service the appliance beyond that described in the user operating instructions. All other servicing should be referred to qualified service personnel.

Notes:

- a. Dirty or scratched CD may cause a skipping problem. Clean or replace the CD.
- b. If an error display or malfunction occurs, disconnect the AC cord and remove all the batteries. Then turn the power back on.

Before operation

Notes: CONCERNING COMPACT DISCS.

Since dirty, damaged or warped discs may damage the appliance, care should be taken of the followings items:

- a. Usable compact discs. Use only compact disc with the mark shown below.
- b. CD compact disc only with digital audio signals.

Safety Information and Warnings



Operation Instructions

Basic function

1. In the standby mode, press the "POWER/FUNCTION" button once to switch on the unit.
2. Press the "POWER/FUNCTION" button again to switch other mode (Radio FM/ Radio AM/ CD/ AUX-IN).
3. Press and hold the "POWER/FUNCTION" 2 seconds to switch off the unit in all modes.

Radio operation

General operation

1. Set the "FUNCTION" selector to "FM" or "AM" mode.
2. Adjust radio frequency to your desired station by using the "TUNING" control.
3. Adjust the desired volume level by pressing "VOLUME+" or "VOLUME-".

For better reception

- FM** - This appliance has a FM antenna located at the rear cabinet. This wire is completely unraveled and extended for better reception.
- AM** - This appliance is equipped with a built - in directional ferrite AM antenna. Rotate the appliance to get better reception.

EQ

Type - ROCK/ JAZZ/POP/CLASSIC/NORMAL

Press and hold "EQ" button 2 seconds then choose ROCK.

Press and hold "EQ" button 2 seconds again to choose JAZZ or others.

Repeat the procedure to choose the correct setting.

Sleep

Sleep Type - 90, 80, 70, 60, 50, 40, 30, 20, 10, 0

Press and hold "Sleep" button 2 seconds then display show "SLEEP 90".

Press and hold "Sleep" button 2 seconds again, then display show "SLEEP 80".

Repeat the procedure to choose the correct setting.

Operation Instructions

CD operation

General operation

PLAY / PAUSE 

Press to start playing CD disc.
Press again to stop playing CD operation temporarily.
Press again to resume playback.

SKIP +  &
SKIP - 

Press to go to the next track or back to the previous track.
Press and hold while playing until you find the point of the sound.

STOP 

Press to stop all CD operation.

Playback

1. Set the "FUNCTION" selector to "CD" mode.
2. Open the CD door and place a CD disc with the label up in the CD compartment.
3. Close the CD door.
4. Focus search is performed if disc is inside. Total number of tracks is read and appears on the display.
5. Press the "PLAY / PAUSE" button to start playing CD disc.
6. Adjust the "VOLUME" control to the desired level.
7. Press the "PLAY / PAUSE" button again when you want to stop playback temporarily.
8. Press the "STOP" button when finished.

Operation Instructions

CD operation

Program


Up to 20 tracks fo CD disc, can be programmed for disc play in any order.
Be sure to press the "STOP" button before use.

1. Press the "MODE" button, the display will show "P01" and flash.
2. Select desired track by using the "SKIP +" or "SKIP -" button.
3. Press the "MODE" button again to confirm desired track into the program memory.
4. Repeat step 2 and 3 to enter additional tracks into the program memory.
5. When all the desired tracks have programmed, press the "PLAY / PAUSE" button to play the disc in the order you have programmed.
6. Press the "STOP" button twice to terminate programmed playback.

Mode

Press the "MODE" button before or during playing CD disc, each press switches the mode function as follows:

- 1 - REPEAT 1
- 2 - REPEAT ALL
- 3 - NORMAL PLAYBACK

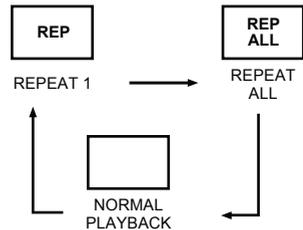

EQ

Type - ROCK/ JAZZ/POP/CLASSIC/NORMAL

Press and hold "EQ" button 2 seconds then choose ROCK.

Press and hold "EQ" button 2 seconds again to choose JAZZ or others.

Repeat the procedure to choose the correct setting.

Sleep

Sleep Type - 90, 80, 70, 60, 50, 40, 30, 20, 10, 0

Press and hold "Sleep" button 2 seconds then display show "SLEEP 90".

Press and hold "Sleep" button 2 seconds again, then display show "SLEEP 80".

Repeat the procedure to choose the correct setting.

Basic Set Up

Other features

Clock setting

1. Clock setting only available in standby mode.
2. Press and hold the "CLOCK" button around 2 seconds, to enter clocking setting mode.
3. Display will show 24H on screen.
4. Press "CLOCK" button to enter the hour setting.
5. Press "SKIP+" or "SLIP-" to adjust.
6. Press "CLOCK" to confirm.
7. Repeat step 5&6 for setting minutes.

AUX in

1. Connect 3.5mm jack cable to this unit and your device.
2. Press the "Function" button to select "AUX IN" mode.
3. Press "Play" on your device and enjoy.

Remark: 3.5mm Aux in cable isn't included.



**THE 'V' STANDS
FOR VALUE.**

M.E.W. (Australia) Pty Ltd
15 Vaughan Street
Essendon Fields VIC 3041
ACN 152 719 036

1300 725 885
customercare@gvaproductions.com.au
gvaproducts.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.