

# Ceramic Plate Pizza Maker

/ GVAPM205



## Instruction Manual

**12**  
MONTH

MANUFACTURER'S  
**WARRANTY**

**GVA**

THE 'V' STANDS  
FOR VALUE.

**Item No.: GVAPM205**

**Voltage: AC 220-240V**

**Wattage:1200W**

## **This product is only for family use.**

**Thank you for choosing this pizza maker.**

**Please read these instructions carefully to get the best results from your appliance.**

## **IMPORTANT SAFEGUARDS**

**This appliance generates heat and steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to persons or property.**

- Do not use outdoors, household use only
- Do not immerse plug, cord or cooking unit in water or other liquid to protect against fire, electric shock or injury to person
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Before connecting the appliance, please check if the voltage indicated on the bottom of the appliance is in accordance with the main voltage in your home.
- Please locate the appliance and plug accessible to the power socket.
- When using this appliance, provide adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall covering, clothing, dishtowels or other flammable materials during use.
- Do not leave this appliance unattended during use.
- Do not use this appliance for other than intended use
- Never use this appliance if it is not in good condition.
- Before use, check that the power specifications of the unit match your local (earthed) power supply.
- Do not use the unit with an extension cord or on the same outlet as several other appliances.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children must be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced before further use by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Before first use, check all pieces are in working order. If not, contact Customer Service for assistance.
- To avoid all risk of electric discharge, don't put the electric wire, the plug or the unit near water.

- Use this household appliance only for cooking.
- Use only in a well-ventilated area.
- Always unplug by grasping the plug, not the cord.
- The use of non-included accessories is not recommended, as it may cause injuries.
- Do not place near a hot gas or electric burner, or in a heated oven.
- Always place the unit on a flat, level and stable surface.
- Do not try to repair the unit yourself; doing so will void your warranty and could cause serious injury or fire.
- Do not use outdoors
- Do not immerse plug, cord or unit in water or other liquid to protect against fire, electric shock or injury to person
- Do not let cord hang over edge of table or counter, or touch hot surfaces
- Before connecting the appliance, please check if the voltage indicated on the bottom of the appliance is in accordance with the main voltage in your home.
- Please locate the appliance and plug accessible to the power socket.
- When using this appliance, provide adequate air space above and on all sides for air circulation .Do not allow this appliance to touch curtains, wall covering, clothing , dishtowels or other flammable materials during use.
- Do not leave this appliance unattended during use.
- Do not use this appliance for other than intended use.

### **Warning: This appliance must be earthed.**

- Keep the appliance away from children.
- The socket used should be in accordance with the plug of the appliance.
- Make sure that the temperature controller is on the position of “off” before plugging. After plugging into the power socket, the indicator “POWER” comes on, showing the appliance is powered. When only the indicator “POWER” comes on, the appliance is not heated. If the using temperature exceeds rated temperature after use, the indicator “POWER” still works and at this time, the appliance maybe very hot.
- Do not switch on the appliance when the pizza pan is empty.
- Do not heat without food inside.
- Do not open the lid when rotating.
- The surface is hot when rotating. Never touch the outer body before it’s cooled to avoid scald.

Before first use, please check carefully if all the parts of the appliance are in good condition. If not, please contact the supplier or manufacturer. Never use this appliance if it is not in good condition or attempt to repair the malfunctioning appliance.

● Your appliance, on first use, may emit light smoke and some odour for a little while; this is just the excess coating being heated off the inside of the appliance. This is not cause for concern, and should stop after a few minutes. [If there is still smoke after 15 mins of continuous use, please contact Customer Service for assistance]

# Using your pizza maker

## 1. Before First Use

- Remove all packing material
- Take everything out of the pizza maker
- Be sure to keep the unit unplugged
- Clean the pizza pan with warm soapy water
- Wipe the inner walls of the pizza maker with a damp cloth or sponge
- Do not immerse in water

## 2. Cooking

**You can cook more than just pizzas with your pizza maker. Use as a portable oven for appetizers, grilled sandwiches and much more.**

**Note: You do not need to preheat the appliance**

- Place the pizza maker on a flat heat resistant surface.
- Be sure that the temperature controller is on the position of "off".
- Lightly coat the pizza pan with cooking spray, especially when making a pizza crust from scratch.
- If using a pre-packaged pizza, be sure to remove all pizza packing before cooking, including the cardboard disc. Do not place foil or any other coverings on the pizza while cooking. This could cause a fire.
- Center your pizza on the pizza pan or make your pizza directly on the pizza pan.
- Open the lid. Place the pizza pan over the center of the drive shaft.
- Close the lid and plug the appliance, the power pilot light is on and the motor of the turnplate is working. Speed of the turnplate is 2.5 or 3 revolutions per minute
- At the moment, the heating pilot light is off for the heating element is not working.
- Adjustable thermostat allow you to select the perfect cooking temperature with three options:, probable temperature for the three steps is as below:

Step 1	Step 2	Step 3
100 °C	160 °C	230 °C

Choose the appropriate temperature as required.

- Switch on the knob to step 3, the heating pilot light is on and the heating element begins to work.
- When the temperature of the turnplate reaches between 220-240°C, the heating pilot light goes off. The heating element stops working while the turnplate keeps rotating.
- When the turnplate cools at a certain stage, the heating pilot light goes on and the heating element starts working again.
- Normally it takes 6-8 minutes to make a pizza.
- When cooking finishes, turn the controller to the OFF position, unplug the appliance and open the lid.
- Carefully place the pizza onto a cutting surface that is heat resistant. Never cut the pizza on the pizza pan. This will damage the pan.

When the appliance stops working, both the power and heating pilot lights are off.

### **3. Cleaning**

- Turn the controller to the OFF position and unplug the power plug from the mains.
- Completely cool the pizza maker and pan before removing or attempting to clean.
- Wash the pizza pan in warm, soapy water. Rinse and dry.
- Never use abrasive pads or alcohol.
- Wipe the pizza oven and cord with a clean damp cloth. Do not immerse the pizza maker in water or any other liquid.
- Dry all parts thoroughly before storing.

### **Practical advice**

- Rising crust pizzas: Over-cooking a pizza may cause the rising crust to touch the upper heating element. This may cause the crust and toppings to scorch. Rising crust pizzas must be carefully watched to prevent this from happening.
- When making a fresh dough pizza, always oil the pizza pan with vegetable oil or cooking spray to prevent the dough from sticking.
- The largest crust the pizza maker will accommodate is 12 inches. Be sure that the crust does not hang over the edge of the pizza pan. If the crust touches the sides of the cover the pizza maker will not turn and the pizza will not cook. (Trim or cut your pizza so that it fits properly on the pan - you will need to accommodate for dough expansion)

### **Repairing:**

- If there is any breakdown or damage, the appliance must be repaired an authorised repairer only. The unit has no user-serviceable parts.

## **WARRANTY INFORMATION**

Thank you for your purchase.

This product is warranted against defects in materials and manufacture for a period of 12 months from the date of original purchase in Australia or New Zealand, provided that it is used in accordance with the provided instructions and the defect is not a result of misuse, neglect, accident, alteration or improper installation.

If you experience any faults or defects with this product, we request that you contact our Authorised Service Centre in the first instance by calling, writing or emailing:

\*

This warranty relates to products used for domestic purposes only. The benefits conferred by this warranty are in addition to and do not restrict, limit or modify any other conditions, warranties, guarantees, rights or remedies expressed or implied by the Competition and Consumer Act 2010 (Australia) or the Consumer Guarantees Act 1993 (New Zealand) or any other relevant consumer protection legislation in Australia or New Zealand. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **Please note:**

- Proof of purchase is required to establish date and location of purchase, for warranty purposes. We recommend that you retain your receipt as proof of purchase.
- As GVA does not undertake that repair facilities and parts will be available for the product, the decision to repair, replace or refund the product will be at the sole option of GVA or its Authorised Service Centres.
- The product will be at the owner's risk whilst in transit to or from GVA or its Authorised Service Centres.
- GVA and its Authorised Service Centres may charge you for labour, parts, transportation and handling costs for work done when the product is found to be in working order.
- Where postage/delivery of the item is deemed necessary, the owner will bear the expense of transporting the item to GVA or its Authorised Service Centre; return freight will be covered by GVA or its Authorised Service Centre.